


Firmware Update Procedure

This document describes how to update the firmware of RM-100RC.


The firmware can be updated using the Web Browser Interface of RM-100RC. Before you start, please make sure that both your PC and RM-100RC are connected.

- * In this document, Windows 10 is used as an example. However, the procedure will be the same if you are using an OS other than Windows 10.
- * Display may vary depending on the Web browser.

1 Start a Web browser on the PC and enter the IP address of RM-100RC in the address bar. Press the Enter key.

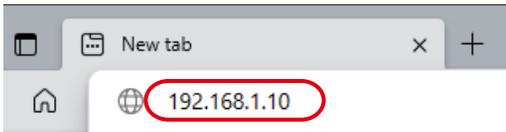

2 The login page of RM-100RC is displayed. Enter the password of RM-100RC and click **Login**.

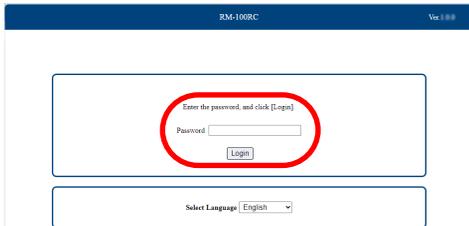


- * When the password configuration page is displayed, configure the password and then login.

3 When the Web page of RM-100RC is displayed, click **Maintenance-Firmware Update**.




4 The **Firmware Update** page appears. Click the button to the right of **New firmware**, and select the latest firmware (RM100RC_vX.X.X.bin) that has been downloaded to the PC, and click **Update**.

- * "X.X.X" is a firmware version.

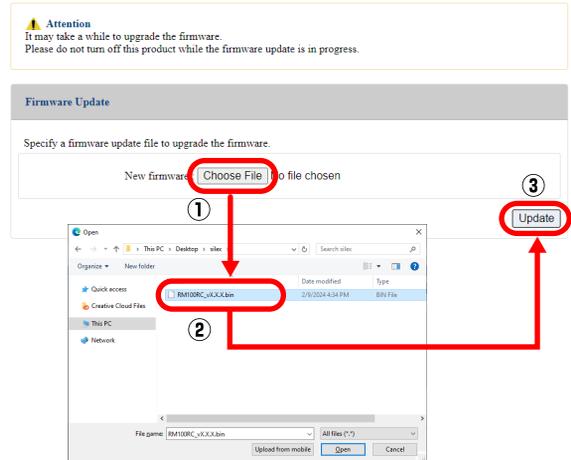

5 The update confirmation dialog appears. Click **OK** to update the firmware. Please wait until the update is complete.

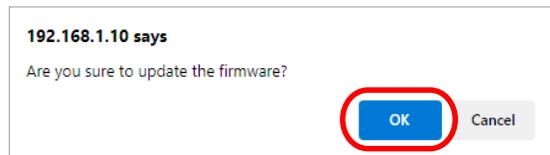

- * Do not turn off RM-100RC or close your Web browser while the firmware update is in process.

6 When the login page is displayed, the firmware update is completed. See the top right of the login page and check the version information is changed.

