

Wi-Fi HaLow™ Access Point

AP-150AH

User's Manual



Copyright© 2024 Silex Technology, Inc. All rights reserved.

WA108190XX

Index

1. Introduction	1
1-1. Introduction	2
1-1-1. About the Notation	2
1-1-2. Disclaimers	2
1-1-3. Trademarks	2
1-1-4. Glossary	3
1-2. Safety Instructions	5
1-3. Notes on Usage	9
1-3-1. Use of Radio Waves.....	9
1-3-2. Notes on Security.....	10
1-3-3. Standards Compliance	11
2. About AP-150AH.....	14
2-1. Image of Using AP-150AH.....	15
2-2. Features.....	16
2-3. Parts and Functions	17
2-4. Specifications.....	23
2-4-1. Hardware Specifications	23
2-4-2. Software Specifications.....	25
2-5. Power Supply	26
2-6. Optional Utilities.....	27
2-6-1. What's AMC Manager®?.....	27
2-6-2. How to Download AMC Manager®	28
3. Configuration.....	29
3-1. Configuration Methods.....	30
3-2. Connecting AP-150AH and PC	31
3-3. About AP-150AH's Web page.....	32
3-4. Displaying the AP-150AH's Web Page	35
3-4-1. Displaying a Web Page by Entering an IP Address to Web Browser	36

3-4-2. Displaying a Web Page by Using AMC Manager®	38
3-5. Configuration Using AMC Manager®	40
3-5-1. Create Configuration File	40
3-5-2. Apply Configuration File.....	42
4. Establishing Network for Long Distance Transfer.....	46
4-1. Changing Network Settings	47
4-2. Configuring IEEE 802.11ah Settings	49
4-2-1. Configuring AP-150AH.....	49
4-3. Configuring NAPT and DHCP Server	53
4-3-1. Configuring AP-150AH.....	54
4-3-2. Configuring EX-150AH	58
4-3-3. Configuring Other Devices.....	61
5. Basic Functions	62
5-1. Checking Status for Connected Wireless Station Devices	63
5-2. Using DHCP Client Function.....	64
5-3. MAC Address Filter Setting	65
5-3-1. Filter Type.....	65
5-3-2. MAC Address Filter.....	66
5-3-3. MAC Address Filter Settings	67
5-4. Login Password Setting.....	69
6. Maintenance Functions.....	71
6-1. Restarting	72
6-1-1. Manual Restart at the Unit Side	72
Restart by Unplugging the Power Supply Cable	72
Restart by Using the Push Switch.....	73
6-1-2. Remote Restart from the Web Page	74
6-2. Updating Firmware.....	75
6-2-1. Downloading the Firmware	75
6-2-2. Updating the Firmware.....	76
6-3. Factory Default Configuration	78

6-3-1. Initialization Using the Push Switch on AP-150AH	78
6-3-2. Initialization from the Web Page	79

A. List of All Settings 80

A-1. Device Configuration.....	81
A-2. 900MHz AP	83
A-2-1. 900MHz AP	83
A-2-2. NAPT Settings	85
A-2-3. MAC Address Filter	87
A-3. Server Certificate.....	88
A-4. Login Password.....	89

B. Troubleshooting 90

B-1. Problems During the Setup.....	91
B-2. Problems on Wireless Access Point Function	93

C. Product Information and Customer Services 95

C-1. Product Information.....	95
C-2. Customer Support Center	95

1. Introduction

Thank you for purchasing the Access Point "AP-150AH".

This manual provides information on how to configure and use AP-150AH.

Please read the **1-2. Safety Instructions** carefully before using AP-150AH.

1-1. Introduction

1-1-1. About the Notation

This manual uses the following symbols to indicate specific information for operating AP-150AH. Be sure to carefully read before using AP-150AH.



: This symbol indicates important information that needs to be observed when operating AP-150AH. Make sure to read this information for safe and proper use.



: This symbol indicates information that is useful when using AP-150AH. If you experience difficulties operating AP-150AH, please refer to this information first.

1-1-2. Disclaimers

- The unauthorized transfer or copying of the content of this manual, in whole or in part, without prior written consent is expressly prohibited by law.
- The content of this manual is subject to change without notice.
- This manual was prepared to accurately match the content of each OS, but the actual information shown on the computer monitor may differ from the content of this manual due to future OS version upgrades, modifications, and other changes.
- Although every effort was made to prepare this manual with the utmost accuracy, Silex Technology will not be held liable for any damages as a result of errors, setting examples, or other content.

1-1-3. Trademarks

- AMC Manager® is a registered trademark of Silex Technology, Inc.
- Windows and Microsoft Edge are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Google Chrome is a trademark of Google LLC.
- Wi-Fi, Wi-Fi HaLow™ and WPA3 are trademarks or registered trademarks of Wi-Fi Alliance.
- USB Type-C is a registered trademark of USB Implementers Forum.
- Other brand or product names are registered trademarks or trademarks of their respective owners.

1-1-4. Glossary

The following explains the technical terms used in this manual.

Please refer to this as you read this manual.

Terms	Explanation
Web Page	AP-150AH's Web interface to use for configuration.
Host Name	Name of the device that the users can specify. The initial value is set based on the MAC address, but the users can change to make it easier to identify and manage.
IP Address	A value used to identify devices on network such as the Internet. Unlike the MAC address, this value can be changed by users.
MAC Address	This is a unique value assigned to network devices. Also called as 'Ethernet Address' for some devices or software programs. Some devices have multiple MAC addresses. MAC address cannot be changed and thus it can be used for device identification.
DHCP	A communication protocol for allocating and acquiring information which is needed for devices to connect to network. AP-150AH has a DHCP server function that distributes information to communicate, and a DHCP client function that obtains necessary communication information from another DHCP server.
DNS	This is a system that manages association between IP addresses and domain names (domain name is a name to identify a computer). Domain names are converted to corresponding IP addresses, while IP addresses are converted to corresponding domain names.
NAPT	Also known as IP masquerade. This function exchanges the IP address and port number when sending data to an external network such as the Internet.
Port Forwarding	With this function, when the data is sent to the specified port from an external network (e.g. Internet), it is forwarded to a device with the corresponding IP address.
Wi-Fi	One kind of wireless communication technology. If devices are compatible with this technology, they can communicate wirelessly with each other even if they are made from different manufacturers.
Access Point	A device or function that serves as a host unit when performing wireless communication. By connecting a station, PC, tablet, etc. to the Access Point on wireless LAN, users can communicate with the same network as the Access Point.
Wireless Station Device	In this document, it means all devices that connect to an Access Point via wireless LAN, such as stations, PCs, and tablets.
SSID	A name to use for grouping on wireless LAN. It must be set for both Access Point and wireless station device to perform wireless communication. Devices with a different SSID cannot communicate with each other.
Channel	A divided frequency band that multiple wireless devices can use for simultaneous communication. The channel needs to be set to communicate over wireless LAN. For wireless station devices, the same channel as the destination device will automatically be applied.



Terms	Explanation
Bandwidth	<p>This is the frequency range to use for wireless LAN.</p> <p>Each channel is 20MHz for the 2.4GHz and 5GHz bands, and 1MHz for the 900MHz band.</p> <p>Setting a large value for the bandwidth will increase the amount of data that can be communicated at once, and will enable high-speed communication.</p>
Authentication Method	<p>A general term of authentication method to use for wireless LAN.</p> <p>Together with the encryption method, it ensures security of the wireless LAN. The same authentication method must be set to the Access Point and wireless station device.</p>
Encryption Mode	<p>A general term of communication encryption method.</p> <p>In this document, it refers to the encryption method to use for wireless LAN.</p> <p>The supported encryption methods will differ depending on each product.</p> <p>It ensures wireless LAN security in combination with the authentication method. The same encryption method must be set to the Access Point and wireless station device.</p>
RSSI	<p>Strength of the received wireless signals.</p> <p>When a value is large, it means the reception is stable.</p>
IEEE 802.11ah	<p>Wi-Fi standard that uses frequencies of the 900MHz band.</p> <p>Also known as "Wi-Fi HaLow™" or "S1G (Sub 1GHz)."</p>

1-2. Safety Instructions







This page provides the safety instructions for safe use of AP-150AH.

To ensure safe and proper use, please read the following information carefully before using AP-150AH. The safety instructions include important information on safe handling of AP-150AH and on general safety issues.

< Indication of the warning >

	Warning	"Warning" indicates the existence of a hazard that could result in death or serious injury if the safety instruction is not observed.
	Caution	"Caution" indicates the existence of a hazard that could result in serious injury or material damage if the safety instruction is not observed.

< Indication of the symbol >

	This symbol indicates the warning and caution. (Example:  "Danger of the electric shock")
	This symbol indicates the prohibited actions. (Example:  "Disassembly is prohibited")
	This symbol indicates the necessary actions. (Example:  "Remove the AC plug from an outlet")

Product installation

 **Warning**



- * Do not place any objects on top of AP-150AH. It may cause fire, electrical shock or malfunction.
- * Do not cover or wrap AP-150AH with cloth such as blankets or tablecloths. Accumulated heat may cause fire, accident, or malfunction.

Caution



- * When installing AP-150AH on a wall or in a high place, make sure that it is securely fixed so that it will not fall due to the weight of the cables.



- * Do not use or store AP-150AH under the following conditions. It may cause malfunction.
 - Locations subject to vibration or shock
 - Shaky, uneven or tilted surfaces
 - Locations exposed to direct sunlight
 - Humid or dusty places
 - Wet places (kitchen, bathroom, etc.)
 - Near a heater or stove
 - Locations subject to extreme changes in temperature
 - Near strong electromagnetic sources (magnet, radio, wireless device, etc.)

Safe handling

 **Warning**



- * When using the device connected to AP-150AH, strictly observe the warnings and cautions indicated by the manufacturer of that device, and use it in the correct procedure. Failure to do so may result in fire, electric shock, accident or malfunction.
- * If your network device has a ground wire, it must be used to prevent electrocution and power surges.



- * Do not use AP-150AH with the equipment that directly affects the human life (medical equipment such as the life support equipment and operating room equipment) and with the system that has a significant impact on the human safety and the maintenance of public functions (nuclear equipment, aerospace equipment, etc.).

 **Caution**



- * Metal parts of AP-150AH may become hot when it is in operation. Be careful not to touch it when moving or disconnecting AP-150AH.

Measures for abnormal operations

 **Warning**



- * In the following cases, turn off the connected device and remove the power supply cable or plug. Failure to follow these instructions may cause fire or an electrical shock.
 - When AP-150AH emits a strange smell, smoke or sound or becomes too hot to touch.
 - When foreign objects (metal, liquid, etc.) gets into AP-150AH.
 - When AP-150AH is dropped or the case is broken or cracked.

Ventilation

 **Warning**



- * Do not cover up the vents on AP-150AH. The temperature inside may rise and cause fire or malfunction.

Disassembly and modification are prohibited



 **Warning**






- * Do not disassemble or modify AP-150AH. Failure to do so may cause fire, electric shock, or malfunction.
- * Do not disassemble or modify the AC adapter (optionally available). Doing so may cause fire, electric shock, or malfunction.

Notes on using the power supply, power cord, and AC adapter

 **Warning**

	<ul style="list-style-type: none"> * Be sure to use the specified power supply voltage. Using the power supply voltage other than the specified one may cause fire or electric shock. * Keep the cords and cables away from children. It may cause an electrical shock or serious injury.
	<ul style="list-style-type: none"> * Do not move AP-150AH while the AC adapter or power supply cable is connected. Doing so may damage the cable and which may result in fire or electric shock. * Do not put anything on the AC adapter or power supply cable, and do not cover it. Also, do not use the AC adapter on a heat-retaining or moisture-retaining object (carpet, sponge, cardboard, styrofoam, etc.). There is a risk of overheating, which may cause fire, accident or malfunction. * Do not roll up or wrap the AC cord. It may cause fire or an electrical shock. * Do not plug or unplug the AC adapter, power supply cable or any other cables with wet hands. It may cause an electrical shock or malfunction.

 **Caution**

	<ul style="list-style-type: none"> * Verify all cables are connected properly and safely before using AP-150AH.
	<ul style="list-style-type: none"> * When AP-150AH will not be used for an extended time, remove the power supply cable and power plug from the connected device and AP-150AH. * When removing AP-150AH, be sure to unplug the power supply cable and power plug of both AP-150AH and the connected device beforehand.
	<ul style="list-style-type: none"> * Be sure to use the AC adapter specified by Silex Technology. Failure to do so may cause malfunction. * Do not place any objects on the cable, and do not bend, twist, or pull it excessively. * Keep cables and power cords away from the place where people walk by. It may cause injury if they trip over it. * When unplugging AP-150AH or the connected device, do not pull on the cord. The cord may break resulting in fire and/or electric shock. Pull only on the plug.

1-3. Notes on Usage

1-3-1. Use of Radio Waves

If there is reinforced concrete/metal between wireless devices, they may not connect

AP-150AH can connect through wood or glass, but may have troubles connecting through reinforced concrete/metal.

AP-150AH complies with the certification of conformance to technical standards. Please pay attention to the following points:

- Please do not disassemble or remodel the product. Such action is prohibited by law.
- Please do not remove the certificate label. Using the product without a label is prohibited.

Radio waves of 900MHz band

Confirm that AP-150AH does not cause a radio interference with other wireless devices before using it. If an interference has occurred, stop using AP-150AH or change the wireless band. Or, try to create a barrier between the devices to avoid an interference.

1-3-2. Notes on Security

Because a wireless LAN uses electromagnetic signals instead of a LAN cable to establish communication with network devices, it has the advantage of allowing devices to connect to the network easily. However, a disadvantage of this is that within a certain range, the electromagnetic signals can pass through barriers such as walls, and if security countermeasures are not implemented in some way, problems such as the following may occur.

- Communication is intercepted by a third party
- Unauthorized access to the network
- Leakage of personal information (ID and Card information)
- Spoofing and the falsification of intercepted data
- System crashes and data corruption

Nowadays, wireless LAN cards or access points are equipped with security measures that address such security problems, so that you can enable security-related settings for wireless LAN products in order to reduce the likelihood of problems occurring.

We recommend that you make yourself fully acquainted with the possible implications of what might happen if you use a wireless product without enabling security features, and that you configure security-related settings and use wireless products at your own responsibility.

1-3-3. Standards Compliance

Notice to US Customers



Contains FCC ID : N6C-SDMAH

FCC Rules, Part 15 §15.19(a)(3)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Silex Technology America, Inc.

<https://www.silextechnology.com/>

FCC Rules Part 15

FCC CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Rules Part 15 Subpart B §15.105(b)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Rules Part 15 Subpart C §15.247(g) / Subpart E

This device and its antenna(s) must not be co-located or operation in conjunction with any other

antenna or transmitter.

FCC Rules Part 15 Subpart C §15.247 and Subpart E

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body.

Notice to Canadian Customers

Contains IC : 4908A-SDMAH

CAN RSS-Gen/CNR-Gen

CAN ICES-3 (B)/NMB-3 (B)

RSS-Gen Issue 5 §8.4

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

RSS-Gen Issue 5 §6.8

This radio transmitter 4908A-SDMAH has been approved by Innovation, Science and Economic Development Canada to operate with the antenna types listed below, with the maximum permissible gain indicated. Antenna types not included in this list that have a gain greater than the maximum gain indicated for any type listed are strictly prohibited for use with this device.

Antenna type	Gain	Impedance
Rod antenna(X9000984-4GDSMB)	900MHz : 3.4dBi	50Ω

Le présent émetteur radio 4908A-SDMAH a été approuvé par Innovation, Sciences et Développement économique Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal. Les types d'antenne non inclus dans cette liste, et dont le gain est supérieur au gain maximal indiqué pour tout type figurant sur la liste, sont strictement interdits pour l'exploitation de l'émetteur.

Type d'antenne	Gain	l'impédance
Antenne à tige(X9000984-4GDSMB)	900MHz : 3,4dBi	50Ω

RSS-102 Issue 5 §2.6

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment and meets RSS-102 of the ISED radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body.

Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'ISDE. Cet équipement doit être installé et utilisé en gardant une distance de 20 cm ou plus entre le radiateur et le corps humain.


2. About AP-150AH

2-1. Image of Using AP-150AH

AP-150AH can connect up to 30 IEEE 802.11ah wireless station devices to establish the network with a long communication distance.

If the Silex Technology's EX-150AH is used together, data of 2.4/5GHz wireless station devices can be transferred over a long distance.

The following is the operation image.

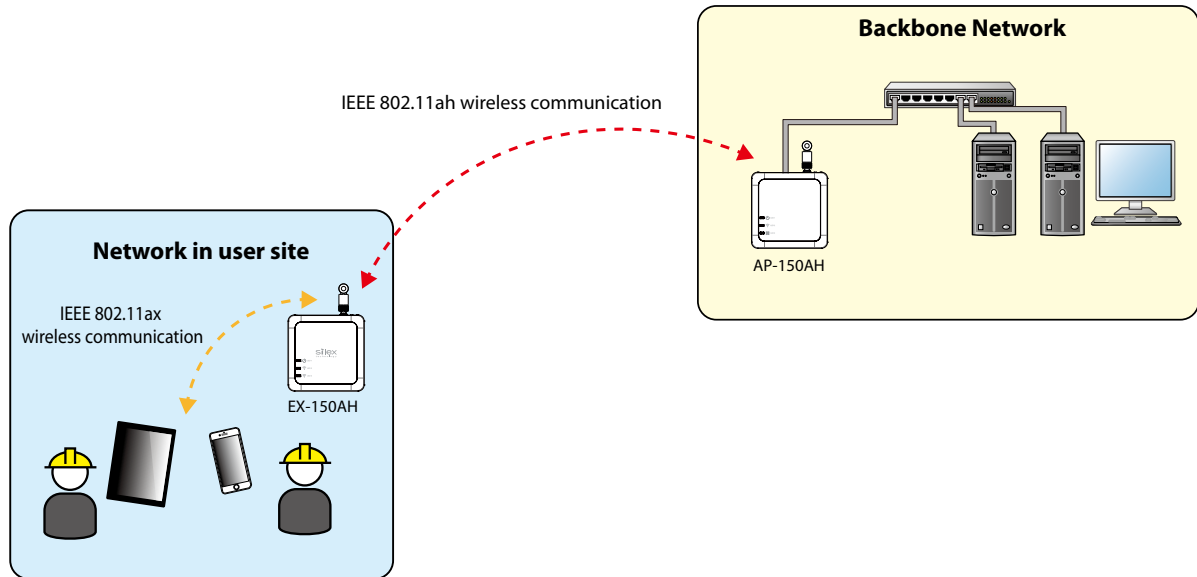

- To use AP-150AH as shown above, AP-150AH need to be installed to locations where 900MHz band radio waves of EX-150AH can reach.

2-2. Features

AP-150AH has the following features:

Long-distance IoT network with IEEE 802.11ah

AP-150AH establishes a network using 900MHz band wireless.

IEEE 802.11ah can achieve a much longer communication distance than the wireless LAN standard that operates at 2.4GHz/5GHz/6GHz of IEEE 802.11. It can avoid radio wave interference with them, and improve the radio wave coverage through wall transparency and obstacle diffraction.

NAPT

As the Network Address Port Translation (NAPT) function is supported, a private IEEE 802.11ah wireless network can be established. Communication will be relayed to the other IP network that is connected to a LAN port of AP-150AH, by translating the IP address and port number.

If this function is used, the large network can be created with fewer IPv4 addresses.

Easy access to the AP-150AH's Web page

The Web page of AP-150AH can easily be accessed from a PC.

Security

The following authentication and encryption methods are supported.

Wireless LAN (900MHz)

Authentication Method	Encryption Mode
Open	(None)
Enhanced Open (OWE)	AES
WPA3-Personal (SAE)	AES

2 ways of power supply

As AP-150AH supports DC 12V to 24V power input, it can receive a power from the same power supply as the factory machines. If there is not a power supply, a USB Type-C device with VBUS voltage 5V/1.5A can also be used.

Wall-mountable

AP-150AH can be mounted on a wall using Bracket Type VI (optionally available).

Unified device management utility "AMC Manager"

AMC Manager® provides the following functions.

- Remote control and monitoring
- Bulk configuration and version update





Note

- For details on AMC Manager®, please visit the Silex Technology's website.

2-3. Parts and Functions


External Dimensions

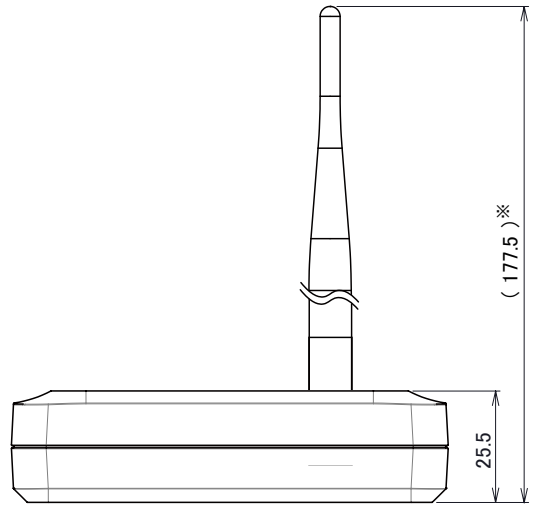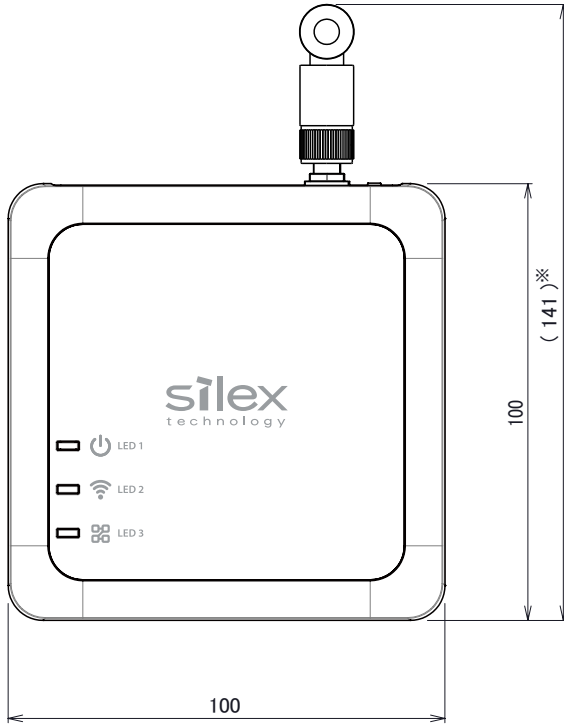

Unit: mm


*) Reference dimensions

Parts and Functions

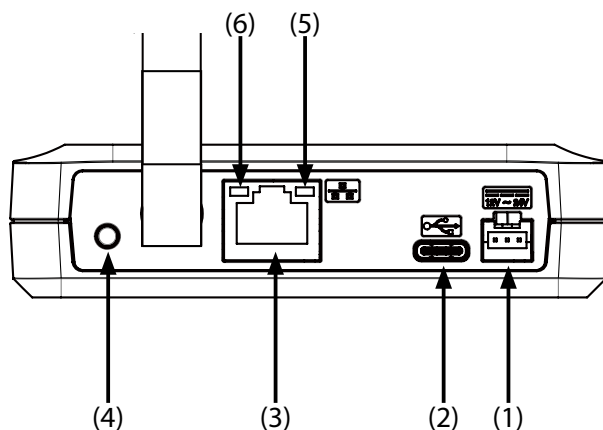

(1) DC connector

Connect the power supply cable.

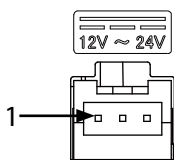

PIN Number	Signal Name	Description
1	FG	-
2	GND	GND
3	VCC	DC 12V-24V

DC connector : S03B-PASK-2 (JST)

To connect to this connector, please use JST PAP-03V-S.

(2) DC connector (USB Type-C)

This is a USB Type-C power connector.



- Do not connect a power supply that supports DC 12V-24V while receiving a power from the USB Type-C connector. It may cause unintended operation or malfunction.

(3) LAN Port

Connect the PC or Ethernet HUB using a LAN cable.

(4) Push switch

By using the push switch, AP-150AH can be restarted or reset to the factory default setting.


For details, see **6-1-1. Manual Restart at the Unit Side - Restart by Using the Push Switch** or **6-3-1. Initialization Using the Push Switch on AP-150AH.**

(5) LED 4 (Orange)

(6) LED 5 (Green)

Shows the Wired LAN device connection status.

LED 4	LED 5	Explanation
ON	ON	Connected in 100BASE-TX network
OFF	ON	Connected in 10BASE-T network
OFF	OFF	Wired LAN device is not connected.

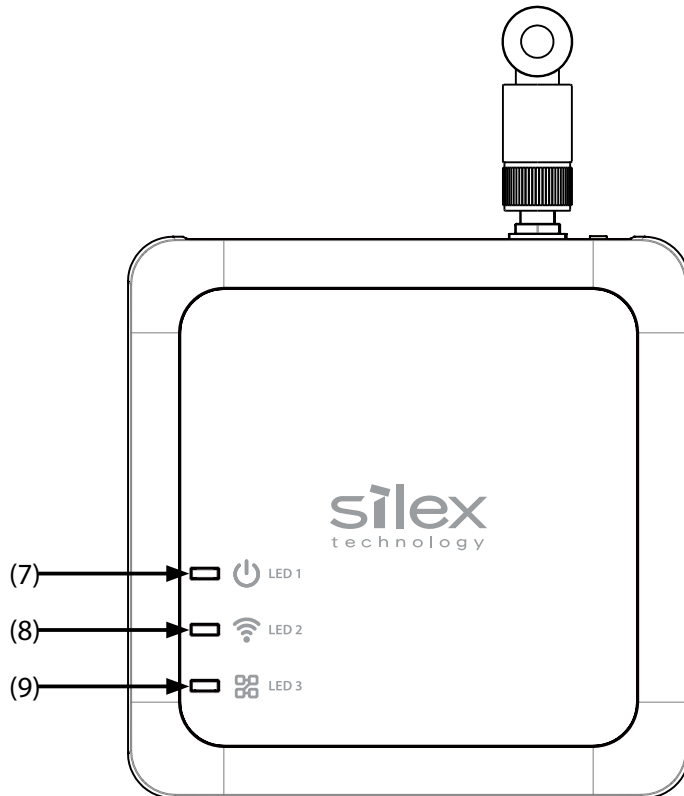

(7) LED 1 (POWER)

The meaning of the LED status is as follows.

Color	Light	Explanation
Green	ON	Powered on
-	OFF	Powered off

(8) LED 2 (IEEE 802.11ah wireless LAN)

The meaning of the LED status is as follows.

Color	Light	Explanation
Green	ON	Has connected to the IEEE 802.11ah wireless station device (1 to 29 devices) An IP address has been assigned.
	BLINK (500-millisecond cycle)	Has connected to the IEEE 802.11ah wireless station device (1 to 29 devices) Transferring data
Orange	ON	Has connected to the IEEE 802.11ah wireless station device (30 devices) An IP address has been assigned.
	BLINK (500-millisecond cycle)	Has connected to the IEEE 802.11ah wireless station device (30 devices) Transferring data
Red	BLINK (500-millisecond cycle)	Has connected to the IEEE 802.11ah wireless station device Failed in IP address assignment
Green/ Orange	Alternately ON (500-millisecond cycle)	Has connected to the IEEE 802.11ah wireless station device Trying to assign an IP address
-	OFF	IEEE 802.11ah wireless station device is not connected

(9) LED 3 (Wired LAN)

The meaning of the LED status is as follows.

Color	Light	Explanation
Green	ON	Has connected to the wired LAN device An IP address has been assigned.
Orange	ON	Has connected to the wired LAN device An IP address has been assigned.
-	OFF	Wired LAN device is not connected


LED1/LED2/LED3 work together under certain conditions.

The following describes the combined LED operation.

LED 1	LED 2	LED 3	Explanation
Blinks orange (1-second cycle)	OFF	OFF	Updating the firmware
Blinks red (200-millisecond cycle)	OFF	OFF	Internal error
Blinks green (500-millisecond cycle)			Processing initialization using a push switch *Green LEDs are flashing simultaneously
Blinks green (1-second cycle)	Blinks orange (1-second cycle)	-	RSSI is decreased (IEEE 802.11ah) *Green/Orange LEDs are flashing simultaneously



- When the condition for combined LED operation is met, the LED display will switch to the corresponding combined operation.
- When multiple conditions are met for the combined LED operation, the latest one will be applied. Please note that the unused LEDs will not change. Also, the LED operation for other than RSSI decrease will remain unchanged.
- When RSSI decreases, the unused LEDs will not change. Also, the LED operation for other than RSSI decrease will remain unchanged.

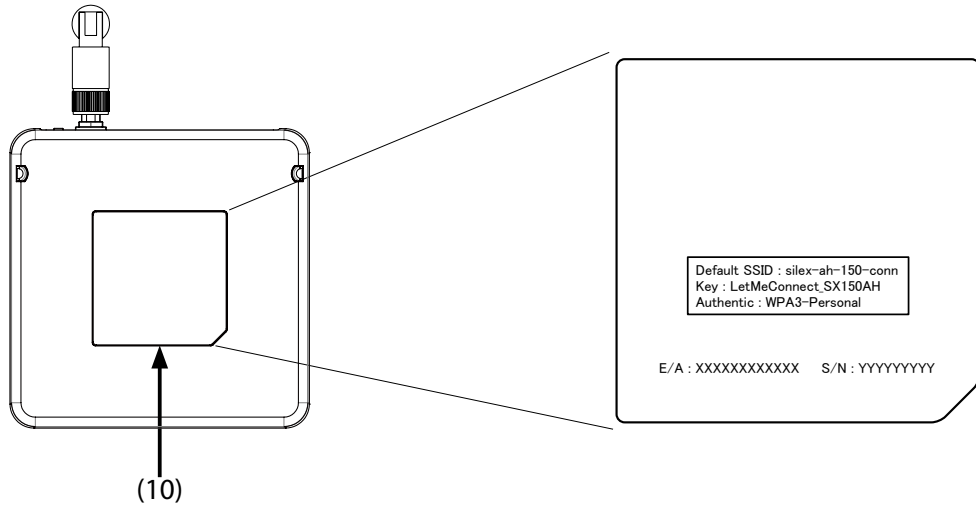

(10) Product label

The following settings are described.

Default SSID	SSID for 900MHz band
Key	Pre-Shared Key
Authentic	Authentication mode
E/A	MAC address of AP-150AH The format of MAC address is "E/A: 1CBCECXXXXXX".
S/N	Serial Number

2-4. Specifications

2-4-1. Hardware Specifications

Push Switch	1	
LED	TOP	LED 1 (Green/Orange/Red) LED 2 (Green/Orange/Red) LED 3 (Green/Orange/Red)
	LAN Port	LED 4 (Orange) LED 5 (Green)
Power supply	DC connector	Operating voltage DC12V to DC24V
	USB Type-C connector	Operating voltage DC5V
Operating environment	Temperature	-20 °C to 40 °C
	Humidity	20% to 90%RH (Non-condensing)
Storage environment	Temperature	-20 °C to 60 °C
	Humidity	20% to 90%RH (Non-condensing)
EMC	FCC Part15 Subpart B Class-B ICES-003 Class-B	
Radio regulation	FCC part15 Subpart C FCC Part 15.247 ISED RSS-247	

Wireless network interface

IEEE 802.11ah	Bandwidth	900MHz	
	Channel	1MHz bandwidth	903.5, 904.5, 905.5, 906.5, 907.5, 908.5, 909.5, 910.5, 911.5, 912.5, 913.5, 914.5, 915.5, 916.5, 917.5, 918.5, 919.5, 920.5, 921.5, 922.5, 923.5, 924.5, 925.5, 926.5
		2MHz bandwidth	905.0, 907.0, 909.0, 911.0, 913.0, 915.0, 917.0, 919.0, 921.0, 923.0, 925.0
		4MHz bandwidth	910.0, 914.0, 918.0, 922.0
		8MHz bandwidth	908.0, 916.0

Wired network interface

LAN port : 1 port, 10BASE-T/100BASE-TX (auto-sensing)

Auto MDI/MDI-X

2-4-2. Software Specifications

TCP/IP	Network layer	ARP IP ICMP
	Transport layer	TCP UDP
	Application layer	DHCP(Client/Server) HTTP/HTTPS(Server) DNS(Client) TFTP SXSMP
Recommended Web browser		Microsoft Edge Google Chrome


2-5. Power Supply

AP-150AH can receive electrical power in the following two ways:

- Power supply (DC 12V to 24V)
- USB Type-C connector


Sample connection 1: When using a power supply

Connect the power supply cable to the DC connector of AP-150AH.

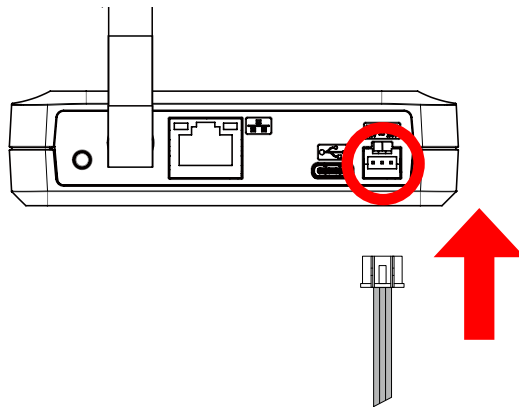

Sample connection 2: When using a USB Type-C power connector

Connect the USB Type-C power connector to the USB Type-C connector of AP-150AH.

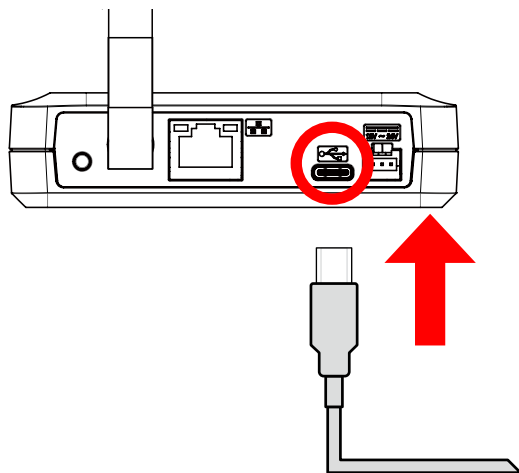

- Do not connect a power supply that supports DC 12V-24V while receiving a power from the USB Type-C connector. It may cause unintended operation or malfunction.


2-6. Optional Utilities

2-6-1. What's AMC Manager®?

AMC Manager® is the integrated device management utility that provides remote status monitoring and individual/bulk configuration for Silex devices over an IP network.

If AMC Manager® is used, the AP-150AH's operating status can be shown as a list.

There are two versions of AMC Manager® ; one is AMC Manager® Free (free version) and the other one is AMC Manager® (paid version). This manual uses AMC Manager® Free for explanation.

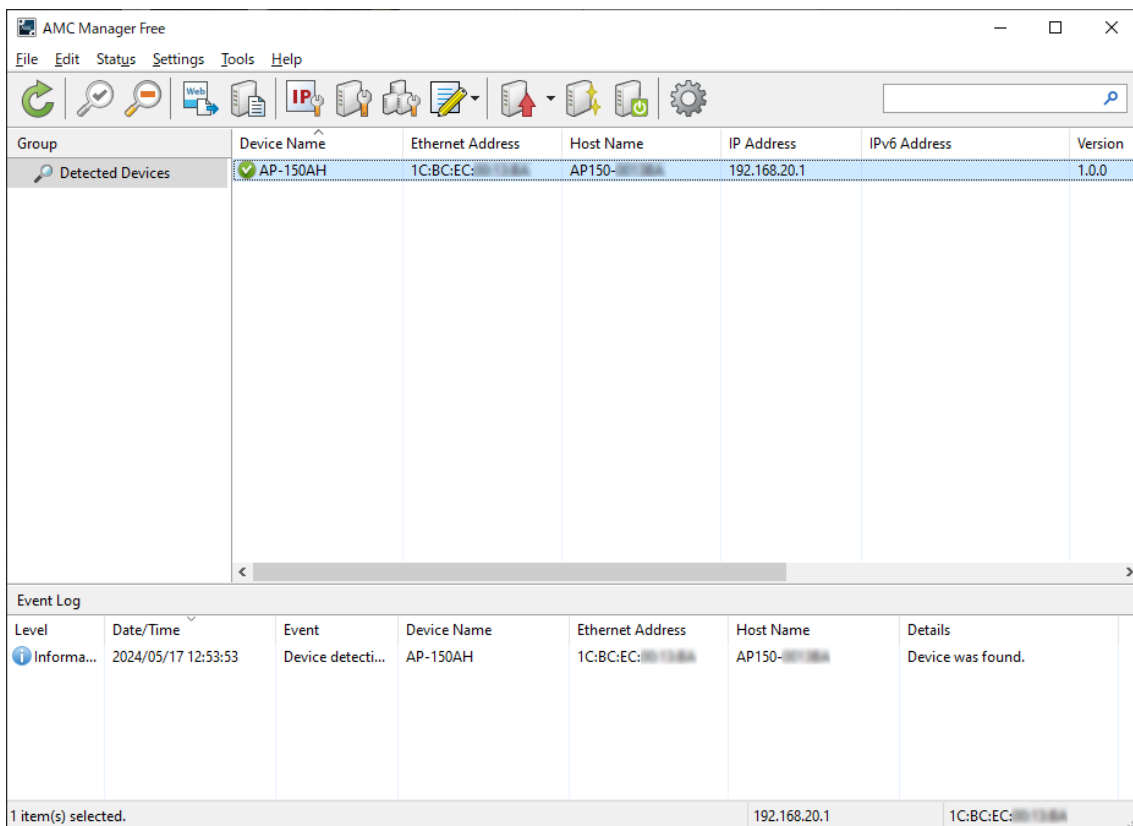

The screenshot shows the AMC Manager Free application window. The main area displays a table of detected devices. Below the table is an event log showing a recent device detection event.

Group	Device Name	Ethernet Address	Host Name	IP Address	IPv6 Address	Version
Detected Devices	AP-150AH	1C:BC:EC:...	AP150-...	192.168.20.1		1.0.0

Level	Date/Time	Event	Device Name	Ethernet Address	Host Name	Details
Information	2024/05/17 12:53:53	Device detecti...	AP-150AH	1C:BC:EC:...	AP150-...	Device was found.



- If you want to use AMC Manager® (paid version), you need to purchase the license key. For how to purchase the license key, please contact Silex Technology. See **C. Product Information and Customer Services** for the contact information.
- Download and use the latest version of AMC Manager®.

2-6-2. How to Download AMC Manager®

AMC Manager® can be downloaded from the Silex Technology's website.
Access the URL below to download it.

<https://www.silextechnology.com/>

- 1.** When the website is displayed, click **Support Center** in the bottom of the page.
- 2.** Click **Software Download**.
- 3.** In the **Software Download** page, click **AMC Manager®**.
- 4.** Download AMC Manager®.

The download is now completed.

3. Configuration

3-1. Configuration Methods

Following configuration methods are available:

- Configure using the AP-150AH's Web page

Access the AP-150AH's Web page to configure it. If you know the IP address of AP-150AH, you can configure it from your PC without AMC Manager®.


- Configure using AMC Manager®

Use AMC Manager® to configure AP-150AH. Multiple units of AP-150AH can be configured at once with the configuration file created beforehand. The same file can be used when the similar configuration is required.


3-2. Connecting AP-150AH and PC

For configuration of AP-150AH, connect the PC to wired LAN.
The following explains the connection procedure.

1. Connect AP-150AH and PC using a LAN cable.

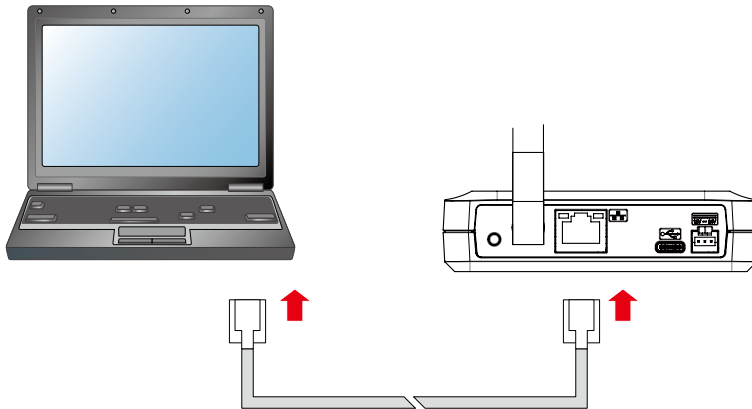

2. Connect the power supply cable.

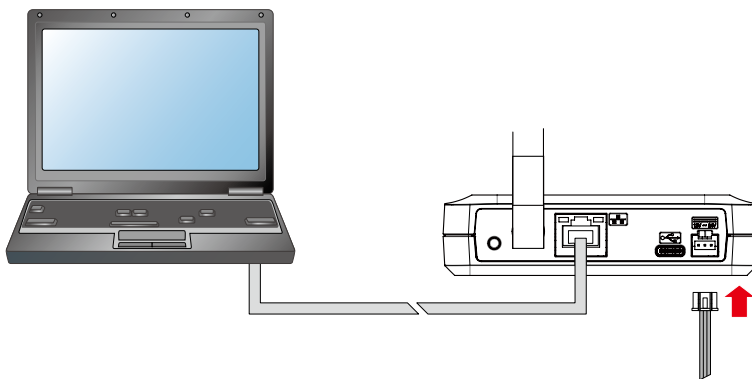

3. Change the network settings of the PC to allow accessing AP-150AH.

Example:

When there is no DHCP server in your environment, the default IP address of AP-150AH is "192.168.20.1".

Then, change the network settings of your PC as below:

IP Address : 192.168.20.21

Subnet Mask : 255.255.255.0




TIP

- Please be sure to set a unique address to your PC, that is not used by AP-150AH.
- This is the procedure to configure an IP address for the wired LAN. For IP address of the wireless LAN, "10.0.0.1" is set by default. If the IP address of the same network segment is set to the wired LAN as the wireless LAN (e.g. "10.0.0.2"), communication is not established.

3-3. About AP-150AH's Web page

The following shows the Web page structure.

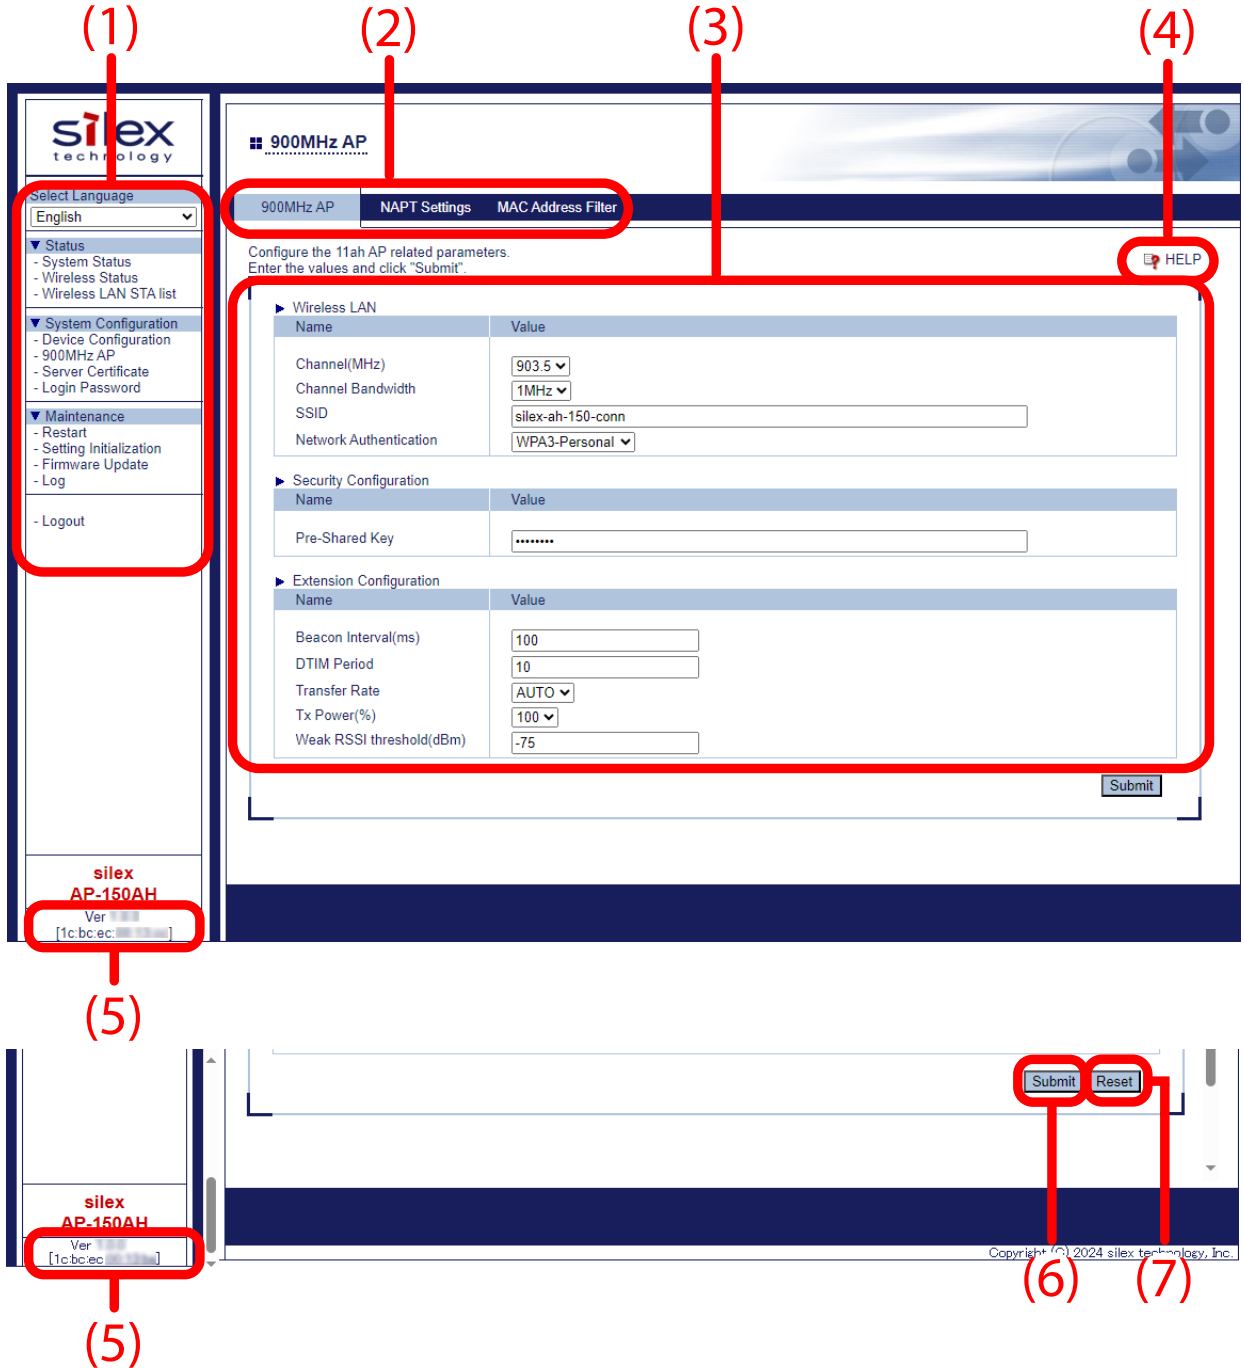

(1) Page menu

If clicked, the configuration page is changed.

(2) Tab

The tab is displayed when there are multiple pages for the configuration. If the tab is clicked, the configuration page is changed.

(3) Configuration page

Each setting can be configured.

(4) Link to Help

The Help page is displayed. The Help page provides the detailed explanation of each setting.

(5) Firmware version / MAC address

The firmware version and MAC address of AP-150AH are displayed.

(6) Submit button

If clicked, the changes you made to the configuration page will be saved. (You may need to scroll-down the screen to find this button.)

(7) Reset button

If clicked, the changes you made to this configuration page will be cleared. (You may need to scroll-down the screen to find this button.)



- Be sure to set a password when you connect AP-150AH to a public network.

TIP

Menu and Settings

	Menu	Explanation
Status	System Status	Displays the system settings of AP-150AH.
	Wireless Status	Displays the IEEE 802.11ah wireless settings of AP-150AH.
	Wireless LAN STA list	Shows the connection status of the IEEE 802.11ah devices connected to AP-150AH.
System Configuration	Device Configuration	Configure the basic communication settings.
	900MHz AP	Configure the setting for the IEEE 802.11ah Access Point function.
	Server Certificate	Create a server certificate for AP-150AH.
	Login Password	Set the password to log in to AP-150AH.

3. Configuration

Menu		Explanation
Maintenance	Restart	Restarts AP-150AH.
	Setting Initialization	Restores all settings to the factory defaults and restarts AP-150AH.
	Firmware Update	Updates the firmware.
	Log	Downloads the log of AP-150AH.
Logout		Log out of the Web page.

3-4. Displaying the AP-150AH's Web Page

The Web page can be displayed by the following methods.

Display the Web page using a method appropriate for your environment.

- Displaying a Web Page by entering the IP address directly

Connect AP-150AH and PC on wired LAN, and enter the IP address of AP-150AH to the Web browser to display the Web page.

- Displaying a Web Page by using AMC Manager®

Connect AP-150AH and PC on wired LAN, and display the Web page using AMC Manager®.



- The display of the AP-150AH's Web page may differ depending on your environment and Web browser.



- The following is the factory default settings for wired LAN settings.

Setting Item	Default Value
DHCP Client	ENABLE
IP Address	192.168.20.1 (If an IP address is not obtained from DHCP server, 192.168.20.1 is used.)
Subnet Mask	255.255.255.0 (If an IP address is not obtained from DHCP server, 255.255.255.0 is used.)
Default Gateway	0.0.0.0 (If an IP address is not obtained from DHCP server, 0.0.0.0 is used.)
DNS Server (Primary)	0.0.0.0 (If an IP address is not obtained from DHCP server, 0.0.0.0 is used.)
DNS Server (Secondary)	0.0.0.0 (If an IP address is not obtained from DHCP server, 0.0.0.0 is used.)

3-4-1. Displaying a Web Page by Entering an IP Address to Web Browser


By entering the IP address of AP-150AH to the address bar of your Web browser, the Web page can be accessed.



- The following instructions will use Microsoft Edge and Windows 10 as examples. The display may vary depending on the OS or Web browser version.

1. Start the Web browser on the PC.

Enter the IP address of AP-150AH to the address bar and press the Enter key.

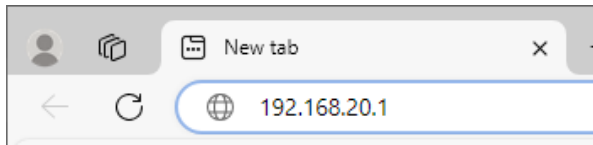


Note

- Change the network setting of the PC to allow communication with AP-150AH.
- When there is no DHCP server in your environment, the default IP address of AP-150AH is "192.168.20.1".
Then, change the network settings of the PC to allow accessing AP-150AH as below:
 - IP Address : 192.168.20.21
 - Subnet Mask : 255.255.255.0

2. The login password configuration page appears.

Enter the password to configure for AP-150AH and click **Submit**.

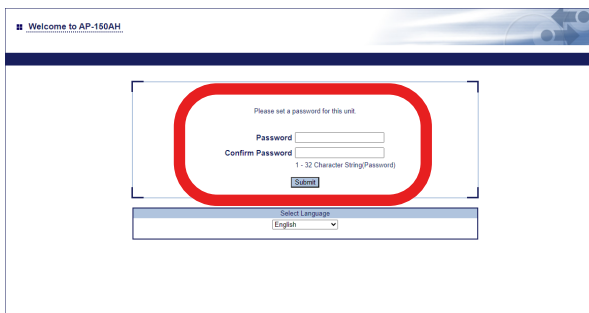

TIP


- Make a note of the password so that you can refer when you have forgotten it. Without the password, no settings can be changed unless AP-150AH is reset to the factory default settings.



Note

- The login password configuration page is displayed only when AP-150AH has the factory default settings. Once configured, it will not be displayed again.

- 3.** When the login page is displayed, enter the configured password and click **Login**.

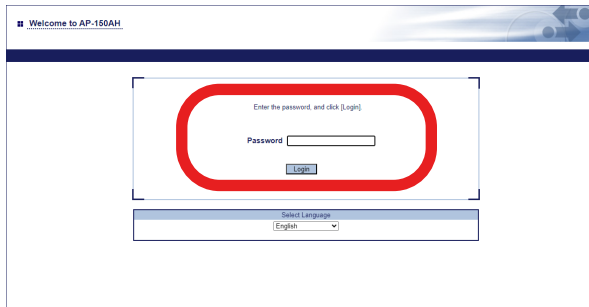

Welcome to AP-150AH

Enter the password and click [Login]

Password

[Login]

Select Language
[English]


Web page has been displayed.


3-4-2. Displaying a Web Page by Using AMC Manager®


The Web page of AP-150AH can be accessed using AMC Manager®.


1. Start AMC Manager® in the PC.

The device list of AMC Manager® shows the discovered AP-150AH units.

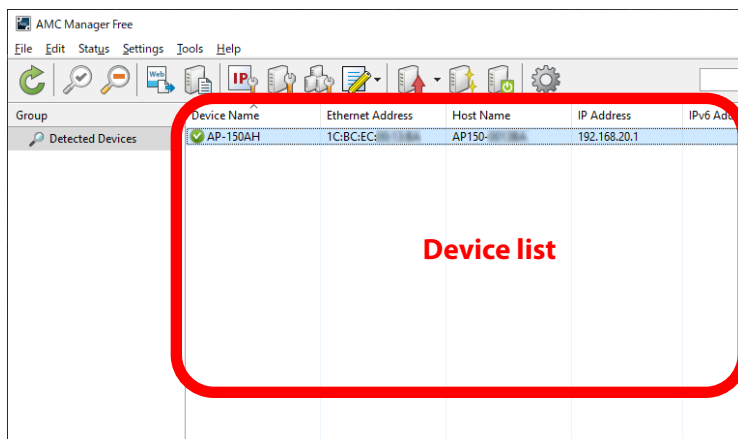


- If the AP-150AH is not displayed on the device list, click the icon Refresh ().
- It may take approximately 1 min to show them on the device list depending on your environment.

2. Choose AP-150AH to configure, and click the icon **Configure using Web browser** ().

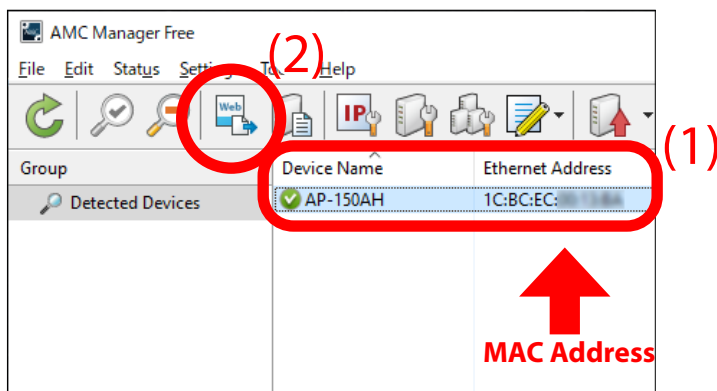

- Check the MAC address that is noted on the product label to see if the displayed device is the correct one you want to configure.

- 3.** The login password configuration page appears.
Enter the password to configure for AP-150AH and click **Submit**.

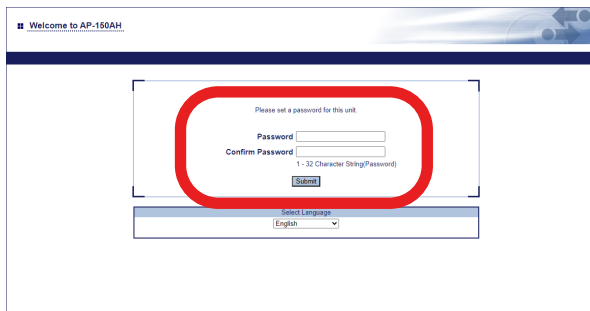


The screenshot shows a web page titled "Welcome to AP-150AH". The main content area contains a form with the following elements:

- Text: "Please set a password for this unit."
- Text: "Password" followed by an input field.
- Text: "Confirm Password" followed by an input field.
- Text: "1 - 32 Character String(Password)" below the confirm password field.
- Text: "Submit" button.
- Text: "Select Language:" followed by a dropdown menu showing "English".

A red rounded rectangle highlights the "Password" and "Confirm Password" input fields and the "Submit" button.

- 4.** When the login page is displayed, enter the configured password and click **Login**.

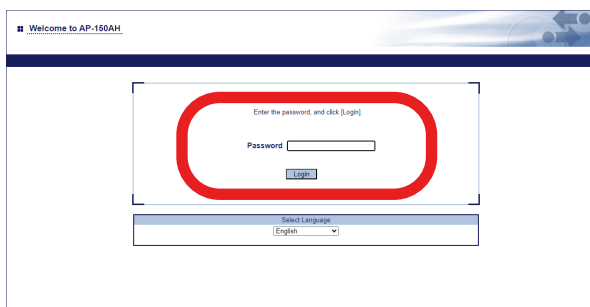

The screenshot shows a web page titled "Welcome to AP-150AH". The main content area contains a form with the following elements:

- Text: "Enter the password, and click [Login]".
- Text: "Password" followed by an input field.
- Text: "Login" button.
- Text: "Select Language:" followed by a dropdown menu showing "English".

A red rounded rectangle highlights the "Password" input field and the "Login" button.


Web page has been displayed.


3-5. Configuration Using AMC Manager®


For configuration using AMC Manager®, create a configuration file first, and then apply it to AP-150AH. The following explains the procedure.

3-5-1. Create Configuration File

1. Click **Start - sillex Tools - AMC Manager**.
The AMC Manager® will be started.

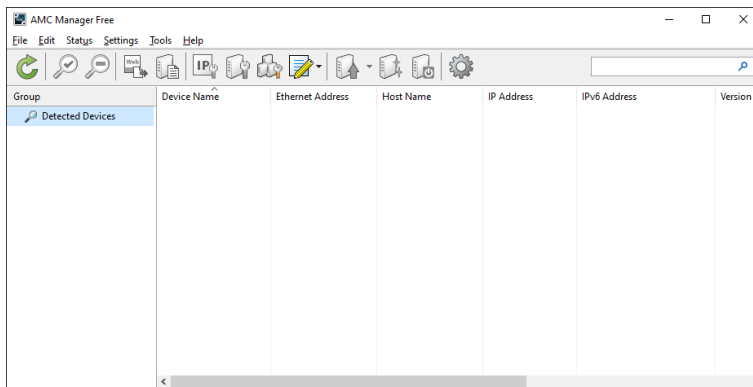


2. Create a configuration file using the template.
Click the icon Create the configuration file () and click Create from Template from the toolbar. In the Select Template window, select the device to configure and click **OK**.

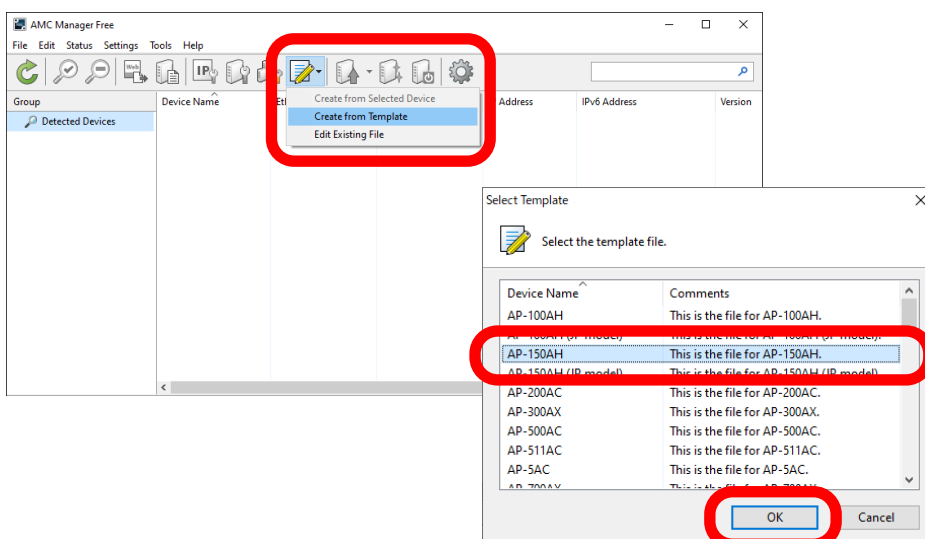

- 3.** In the **Create Configuration File** window, check the check box of the items you want to use for the configuration file, edit the settings and click **Save**.


In the dialog to save the configuration file, specify the file name and click **Save**.

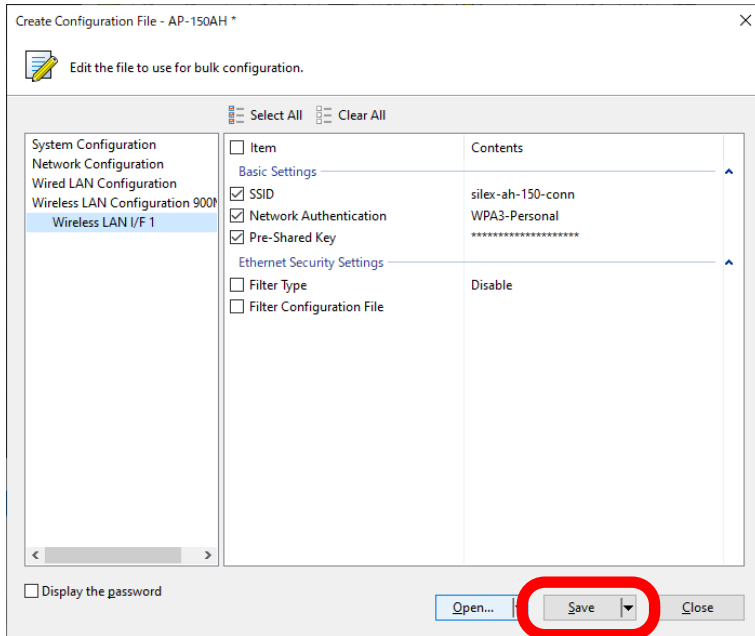**Note**


- When AP-150AH is used for the first time, the login password needs to be set.

3-5-2. Apply Configuration File

1. Connect the PC to AP-150AH.
For details on the connection method, see **3-2. Connecting AP-150AH and PC.**
2. Select the AP-150AH unit to configure from the device list of AMC Manager®, and click the icon **Configure multiple devices in bulk** ().
For bulk configuration, the configuration file is used to send the settings to the devices.

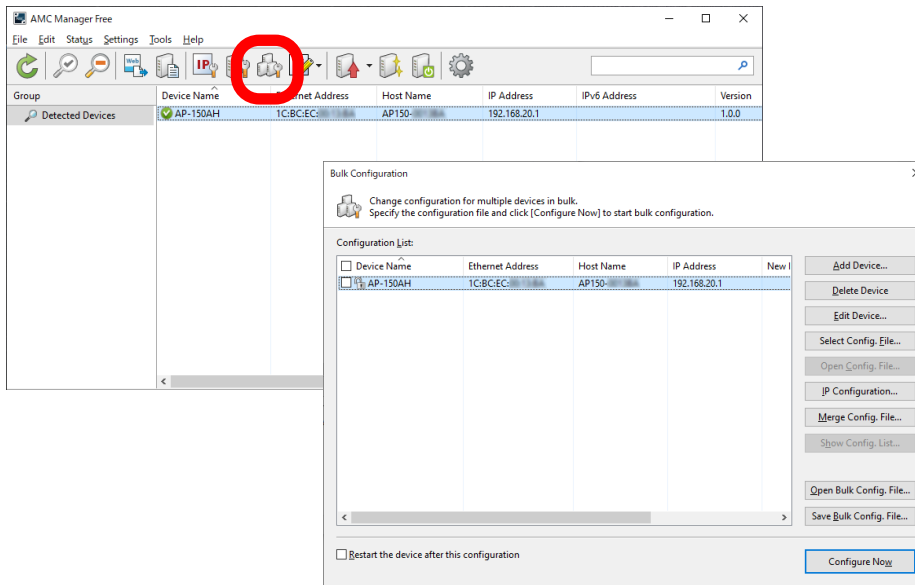


3. In the **Bulk Configuration** window, select the AP-150AH unit to configure from the **Configuration List** (1) and click the **Select Config. File** button (2).
When a file selection dialog appears, select the configuration file that you have created and click **Open**.

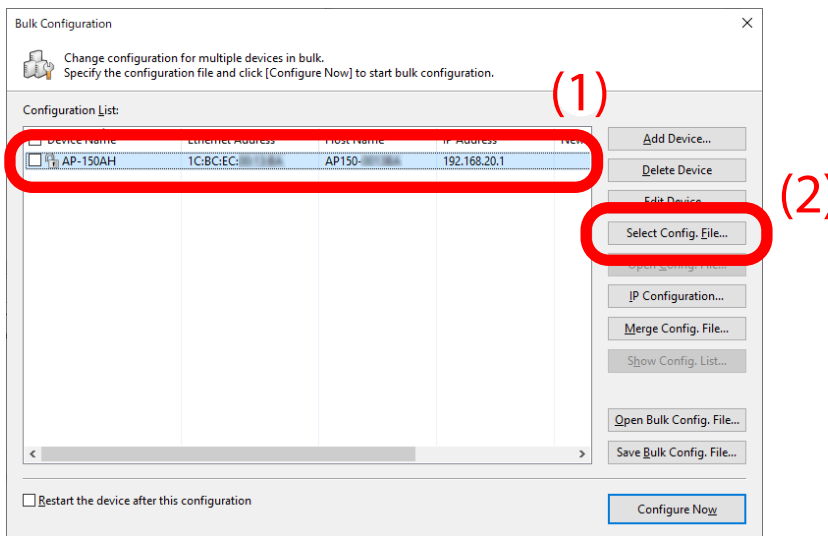


4. The selected file is displayed at **Configuration File Name**.

Click **IP Configuration** for the IP address configuration.

When you are using the DHCP server to automatically configure the IP address, skip this and go on to **6**.

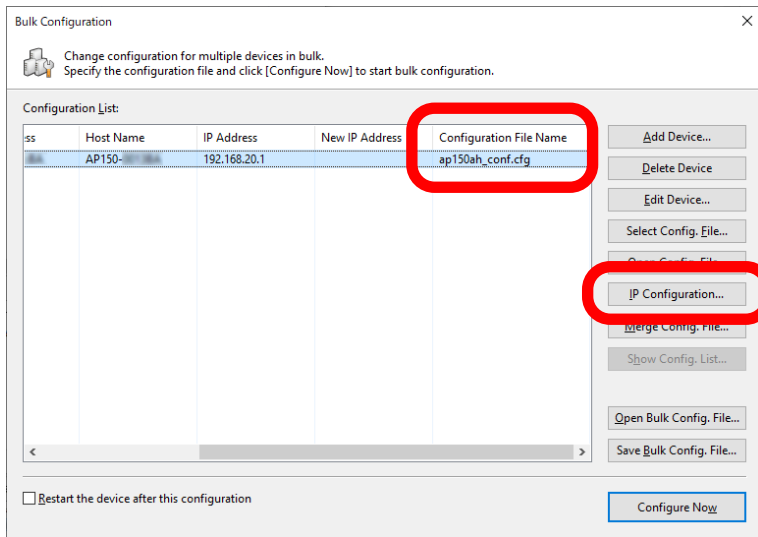


5. In the **IP Address Configuration** window, specify the range of IP address to configure for AP-150AH, and click **OK**.

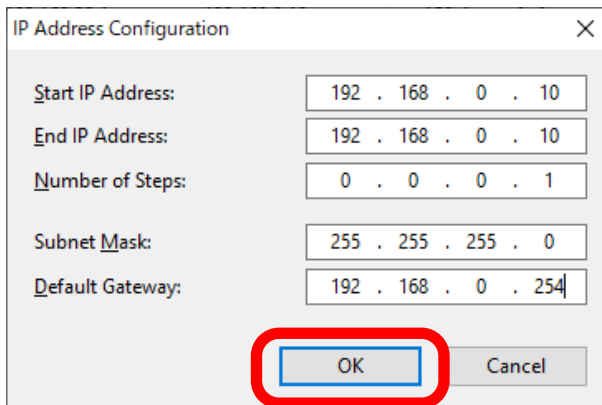


AP-150AH User's Manual

3. Configuration


6. The IP addresses to configure are pre-assigned and displayed under **New IP Address**.

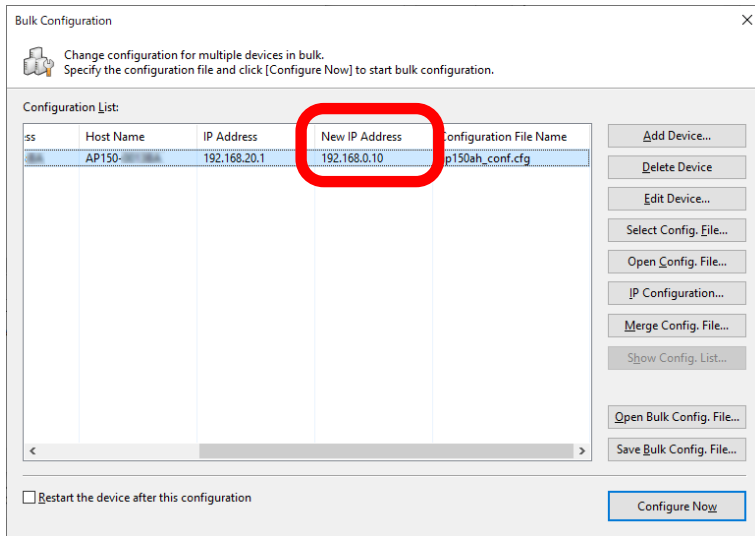

7. Check the check boxes of AP-150AH units to configure (1) and click **Configure Now** (2).

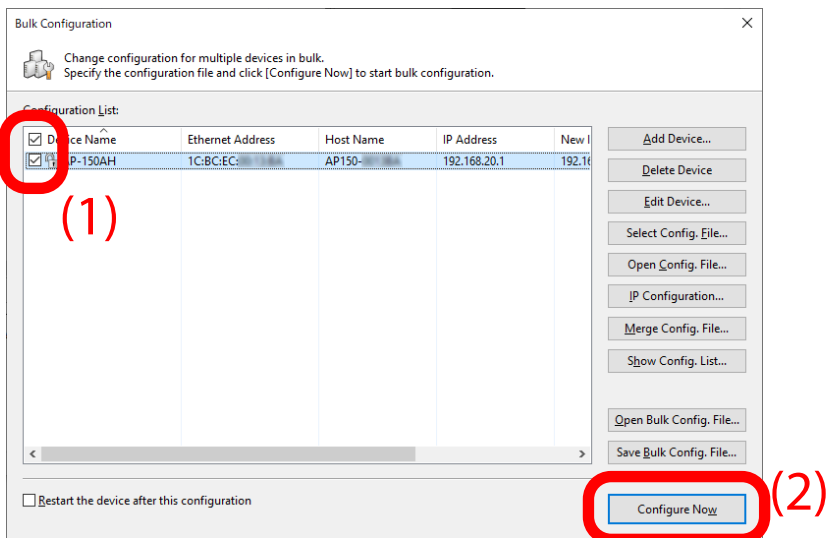

- 8.** The configuration performs and the result is displayed.
Click **Close**.

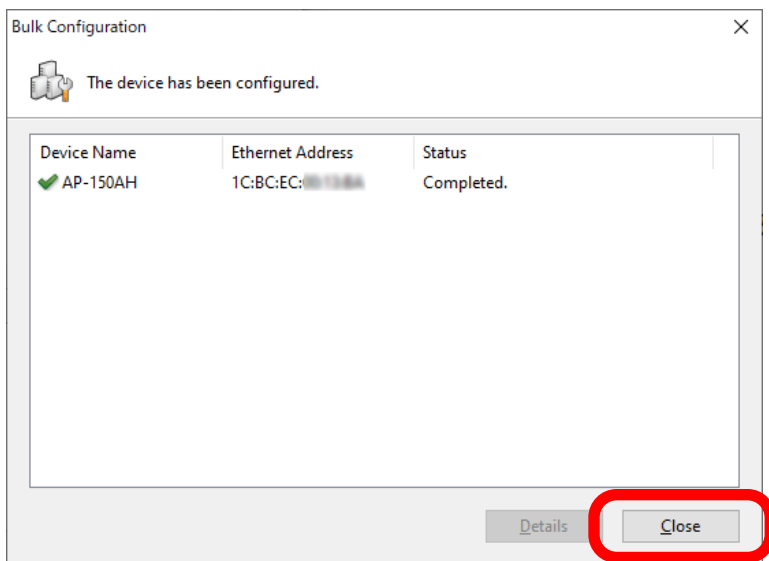

- 9.** When there are more AP-150AH units to configure, repeat the process of **1** to **8** and configure them one by one.

The configuration has now been completed.

4.

Establishing Network for Long Distance Transfer

4-1. Changing Network Settings

The following explains how to change the network settings for the wired LAN side of AP-150AH.


1. Display the AP-150AH's Web page.



Note

- For how to display the AP-150AH Web page, see **3-4. Displaying the AP-150AH's Web Page**.

2. Click **System Configuration - Device Configuration** from the page menu.

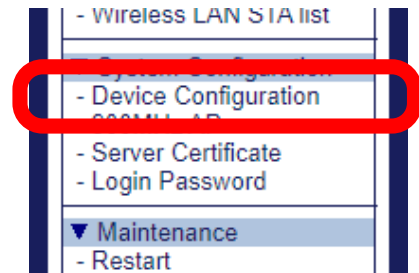

3. The **Device Configuration** page is displayed.
Change the settings at **TCP/IP** appropriately for the network where AP-150AH is installed.

Device Configuration

Device Configuration

Configure the Device related parameters.
Enter the values and click "Submit".

▶ General Configuration

Name	Value
Host Name	AP150-XXXXXX

▶ Wired LAN Configuration

Name	Value
Link Speed	AUTO

▶ TCP/IP

Name	Value
DHCP Client	ENABLE
IP Address	192.168.20.1
Subnet Mask	255.255.255.0
Default Gateway	0.0.0.0
DNS Server (Primary)	0.0.0.0
DNS Server (Secondary)	0.0.0.0

Submit



TIP

- To assign an IP address using DHCP, select **ENABLE** for **DHCP Client**. By defaults, it is set to **ENABLE**. Also, set "0.0.0.0" for **IP Address**. If an IP address assignment fails for some reason, the request for assignment will continue to be sent to the DHCP server until it is successfully configured.



Note

- For details on each configuration item, see **A-1. Device Configuration**.

4. Check the settings and click **Submit**.

Device Configuration	
Device Configuration	
Configure the Device related parameters. Enter the values and click "Submit".	
HELP	
▶ General Configuration	
Name	Value
Host Name	AP150
▶ Wired LAN Configuration	
Name	Value
Link Speed	AUTO
▶ TCP/IP	
Name	Value
DHCP Client	ENABLE
IP Address	192.168.20.1
Subnet Mask	255.255.255.0
Default Gateway	0.0.0.0
DNS Server (Primary)	0.0.0.0
DNS Server (Secondary)	0.0.0.0
Submit	

5. The completion page is displayed.
Click **Restart**. The new settings will take effect after AP-150AH is restarted.

▶ Setting is completed.
To take effect of this setting, please restart.

Restart



- If you do not want to apply the configuration change, reset it to the previous settings and click **Submit** at the bottom right of the Web page. Remember that the changes will take effect after the restart.

6. The restart progress page is displayed.
When the login page is displayed, the configuration is completed.

4-2. Configuring IEEE 802.11ah Settings

By using the IEEE 802.11ah wireless station device and AP-150AH, it is possible to establish a network that can transfer data to a remote location after it is sent from devices connected to the IEEE 802.11ah wireless station device.

4-2-1. Configuring AP-150AH

The following explains how to configure AP-150AH


1. Display the AP-150AH's Web page.



Note

- For how to display the AP-150AH Web page, see **3-4. Displaying the AP-150AH's Web Page.**

2. Click **System Configuration - 900MHz AP** from the page menu.

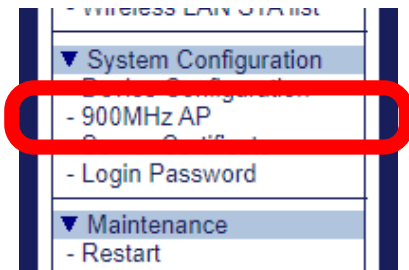

4. Establishing Network for Long Distance Transfer

3. The **900MHz AP** page is displayed.
Change **SSID**, **Channel(MHz)**, etc. under **Wireless LAN** appropriately for the wireless network where AP-150AH is connected.

900MHz AP

900MHz AP | NAPT Settings | MAC Address Filter

Configure the 11ah AP related parameters.
Enter the values and click "Submit".

Wireless LAN

Name	Value
Channel(MHz)	903.5
Channel Bandwidth	1MHz
SSID	sillex-ah-150-conn
Network Authentication	WPA3-Personal

Security Configuration

Name	Value
Pre-Shared Key

Extension Configuration

Name	Value
Beacon Interval(ms)	100
DTIM Period	10
Transfer Rate	AUTO
Tx Power(%)	100
Weak RSSI threshold(dBm)	-75

Submit

If **WPA3-Personal** is selected for **Network Authentication**, the settings of **Security Configuration** are displayed.

Set the Pre-Shared Key.

900MHz AP

900MHz AP | NAPT Settings | MAC Address Filter

Configure the 11ah AP related parameters.
Enter the values and click "Submit".

Wireless LAN

Name	Value
Channel(MHz)	903.5
Channel Bandwidth	1MHz
SSID	sillex-ah-150-conn
Network Authentication	WPA3-Personal

Security Configuration

Name	Value
Pre-Shared Key

Extension Configuration

Name	Value
Beacon Interval(ms)	100
DTIM Period	10
Transfer Rate	AUTO
Tx Power(%)	100
Weak RSSI threshold(dBm)	-75

Submit

Make a note of the followings.

- SSID
- Network Authentication
- Pre-Shared Key

AP-150AH User's Manual

4. Establishing Network for Long Distance Transfer

Change the setting at **Extension Configuration** as necessary.

The screenshot shows the configuration page for a 900MHz AP. The 'Extension Configuration' section is highlighted with a red box. The settings are as follows:

Parameter	Value
Beacon Interval(ms)	100
DTIM Period	10
Transfer Rate	AUTO
Tx Power(%)	100
Weak RSSI threshold(dBm)	-75




- For details on each configuration item, see **A-2-1. 900MHz AP**.

Note

4. Check the settings and click **Submit**.

The screenshot shows the same configuration page as above, but with the 'Submit' button at the bottom right highlighted by a red circle.

- 5.** The completion page is displayed.
Click **Restart**. The new settings will take effect after AP-150AH is restarted.

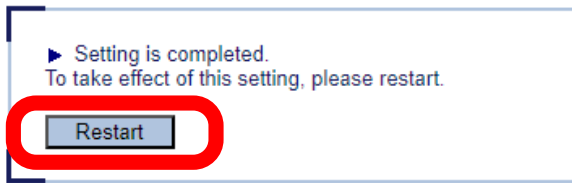**Note**


- If you do not want to apply the configuration change, reset it to the previous settings and click **Submit** at the bottom right of the Web page. Remember that the changes will take effect after the restart.

- 6.** The restart progress page is displayed.
When the login page is displayed, the configuration is completed.

4-3. Configuring NAPT and DHCP Server

If a wireless network environment is established by enabling the NAPT function of AP-150AH, the wired LAN and wireless LAN of AP-150AH will be separated.

For the connected wireless station devices, AP-150AH assigns an IP address as a DHCP server and which can reduce the number of use of IPv4 address in the network. AP-150AH can also transfer data across networks after converting the port numbers and IP addresses.

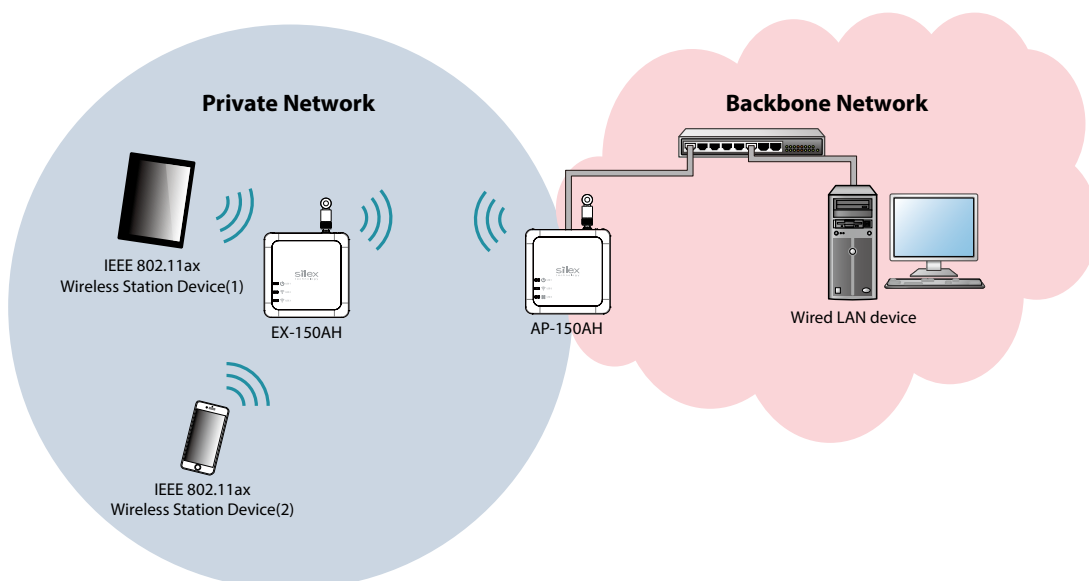

When the NAPT function is enabled, the following IP addresses will be used in the above image.

Device	IP address to use	Sample address
AP-150AH (on wired LAN)	The IP address that has been set to the device configuration page of AP-150AH	192.168.20.1
AP-150AH (on wireless LAN)	The IP address that has been set to NAPT IP Address of NAPT Configuration on AP-150AH	10.0.0.1
EX-150AH	The IP address that has been assigned by the DHCP server function of AP-150AH.	10.0.0.10
IEEE 802.11ax Wireless Station Device(1)	The IP address that has been assigned by the DHCP server function of AP-150AH.	10.0.0.11
IEEE 802.11ax Wireless Station Device(2)	The IP address that has been assigned by the DHCP server function of AP-150AH.	10.0.0.12

When the NAPT function is disabled, routing and address translation of NAPT will not perform.

To obtain an IP address from a DHCP server for the devices connected to EX-150AH, the DHCP server must be running on the backbone network to which AP-150AH is connected.



- When the NAPT function is enabled, AP-150AH operates as a DHCP server. To assign an IP address to EX-150AH, select **ENABLE** for **DHCP Client** on EX-150AH.
- When the NAPT function is enabled, an IP address of AP-150AH must be registered to each device as the default gateway. For example, set the followings in case of the above image.
 - EX-150AH, wireless station device: NAPT IP address of AP-150AH
 - Wired LAN device: IP address of AP-150AH
- For EX-150AH and wireless station devices, the default gateway settings do not need to be configured manually if the DHCP client is enabled on them.

4-3-1. Configuring AP-150AH


The following explains how to set the NAPT function of AP-150AH.

1. Display the AP-150AH's Web page.




- For how to display the AP-150AH Web page, see **3-4. Displaying the AP-150AH's Web Page.**

2. Click **System Configuration - 900MHz AP** from the page menu.

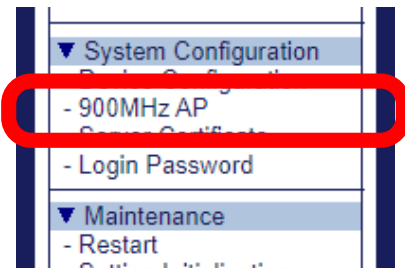

3. The **900MHz AP** page is displayed. Click the **NAPT Settings** tab.

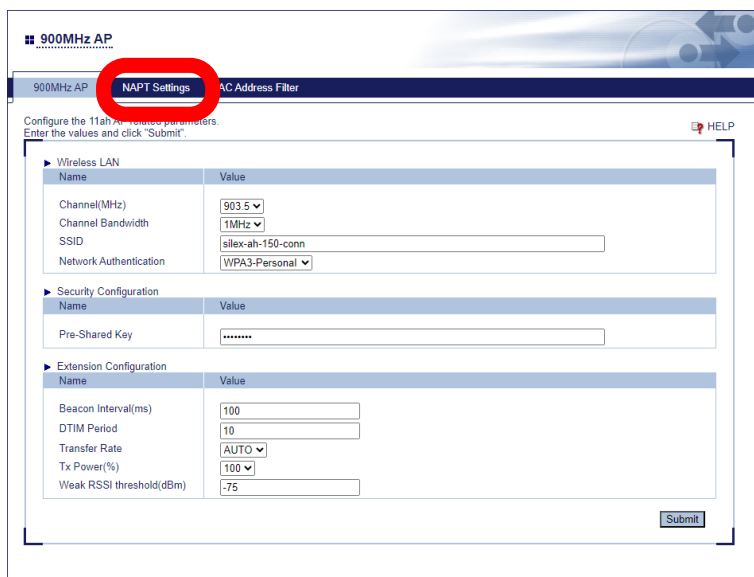

4. The **NAPT Settings** page is displayed.
Select **ENABLE** for **NAPT**.

The screenshot shows the 'NAPT Settings' page for a 900MHz AP. The page title is '900MHz AP' and the sub-tab is 'NAPT Settings'. Below the title, there is a instruction: 'Configure the NAPT related parameters. Enter the values and click "Submit".' and a 'HELP' link. The main configuration area is divided into two sections: 'NAPT Settings' and 'Port Forward Configuration'. In the 'NAPT Settings' section, the 'NAPT' dropdown menu is highlighted with a red circle and set to 'ENABLE'. Other fields include 'NAPT IP Address' (10.0.0.1), 'Subnet Mask' (255.255.240.0), 'DHCP Start IP Address' (10.0.0.10), 'DHCP End IP Address' (10.0.7.217), and 'DHCP Lease Time' (10 Day, 0 Hour, 0 Minute). The 'Port Forward Configuration' section has a 'Port Forwarding' dropdown menu set to 'DISABLE'. A 'Submit' button is located at the bottom right of the configuration area.



- By defaults, **NAPT** is set to **ENABLE**.
- For details on each configuration item, see **A-2-2. NAPT Settings**.

5. Set the IP address of AP-150AH to use for a private network, and configure the DHCP server function.
Take notes of the values set for **NAPT IP Address** and **Subnet Mask**.

The screenshot shows the 'NAPT Settings' page for a 900MHz AP. The page title is '900MHz AP' and the sub-tab is 'NAPT Settings'. Below the title, there is a instruction: 'Configure the NAPT related parameters. Enter the values and click "Submit".' and a 'HELP' link. The main configuration area is divided into two sections: 'NAPT Settings' and 'Port Forward Configuration'. In the 'NAPT Settings' section, the 'NAPT IP Address' and 'Subnet Mask' fields are highlighted with a red circle. Other fields include 'Subnet Mask' (255.255.240.0), 'DHCP Start IP Address' (10.0.0.10), 'DHCP End IP Address' (10.0.7.217), and 'DHCP Lease Time' (10 Day, 0 Hour, 0 Minute). The 'Port Forward Configuration' section has a 'Port Forwarding' dropdown menu set to 'DISABLE'. A 'Submit' button is located at the bottom right of the configuration area.

To forward data to the specified device after it is received on the specified port number, continue the settings for the port forwarding function.

When the port forwarding function is not used, click **Submit** at the bottom right of the page and go on to the step 9.



- When the port forwarding function is enabled, only packets for the registered information will be forwarded.



- The port forwarding function is applied only for transmission from outside to inside of NAPT.

6. Select **ENABLE** for **Port Forwarding**.

The screenshot shows the configuration interface for a 900MHz AP. Under the 'NAPT Settings' section, various parameters like IP Address, Subnet Mask, and DHCP settings are visible. Below this, the 'Port Forward Configuration' section has a 'Port Forwarding' dropdown menu that is circled in red and currently set to 'DISABLE'. A 'Submit' button is located at the bottom right of the configuration area.

7. Configure the detailed settings for the port forwarding function.
Enter the following settings and click **Add**.

Setting Item	Explanation
Destination (IP Address : Port)	Set the IP address and port number as forwarding destination.
Receive Port	Set the number of port to receive data. When data is received on the specified port number, it will be forwarded to the device of Destination (IP Address: Port) .
Protocol	Set the protocol for receiving the transferred data. The received data will be forwarded to the device of Destination (IP Address: Port) using the specified protocol.

This screenshot shows the 'Add Configuration' section of the port forwarding settings. A red circle highlights the input fields: 'Destination (IP Address : Port)' is set to '10.0.0.15 : 10001', 'Receive Port' is set to '20000', and 'Protocol' is set to 'TCP'. An 'Add' button is next to the protocol dropdown. Below this, there is a table for 'Registered Information' with columns for Destination Address, Destination Port, Receive Port, and Protocol, and a 'Submit' button at the bottom.



- Up to 40 destinations can be registered.

8. Confirm that the entered information is added to **Registered Information**, and click **Submit**.

900MHz AP

900MHz AP | NAPT Settings | MAC Address Filter

Enter the values and click "Submit".

NAPT Settings

Name	Value
NAPT	ENABLE
NAPT IP Address	10.0.0.1
Subnet Mask	255.255.240.0
DHCP Start IP Address	10.0.0.10
DHCP End IP Address	10.0.7.217
DHCP Lease Time	0 Day 0 Hour 0 Minute

Port Forward Configuration

Name	Value
Port Forwarding	ENABLE

Add Configuration

Name	Value
Destination (IP Address : Port)	10.0.0.15 : 10001
Receive Port	20000
Protocol	TCP

Registered Information

Destination Address	Destination Port	Receive Port	Protocol
10.0.0.15	10001	20000	TCP

Submit



- Click **Delete** under **Registered Information** to delete the registered information.

Note

Registered Information

Destination Address	Destination Port	Receive Port	Protocol
10.0.0.15	10001	20000	TCP

Delete

9. The completion page is displayed.
Click **Restart**. The new settings will take effect after AP-150AH is restarted.

Setting is completed.
To take effect of this setting, please restart.

Restart



- If you do not want to apply the configuration change, delete the registered information and click **Submit** at the bottom right of the Web page. Remember that the changes will take effect after the restart.

10. The restart progress page is displayed.
When the login page is displayed, the configuration is completed.

4-3-2. Configuring EX-150AH

The following explains how to configure EX-150AH.

1. Display the EX-150AH's Web page.



- For how to display the EX-150AH Web page, see **EX-150AH User's Manual**.

2. Click **System Configuration - Device Configuration** from the page menu.



3. The **Device Configuration** page is displayed.

To assign an IP address using the DHCP server function of AP-150AH, select **ENABLE** for **DHCP Client**.

The screenshot shows the 'Device Configuration' web page. It has a title bar 'Device Configuration' and a sub-header 'Device Configuration'. Below that, it says 'Configure the Device related parameters. Enter the values and click "Submit".' There is a 'HELP' icon. The page is divided into sections: 'General Configuration', 'Wired LAN Configuration', and 'TCP/IP'. Under 'General Configuration', there is a 'Name' field with 'Value' and a 'Host Name' field with 'AP150-0013BA'. Under 'Wired LAN Configuration', there is a 'Name' field with 'Value' and a 'Link Speed' dropdown menu with 'AUTO'. Under 'TCP/IP', there is a 'DHCP Client' dropdown menu with 'ENABLE' selected, highlighted by a red oval. Below it are fields for 'Subnet Mask' (255.255.255.0), 'Default Gateway' (0.0.0.0), 'DNS Server (Primary)' (0.0.0.0), and 'DNS Server (Secondary)' (0.0.0.0). A 'Submit' button is at the bottom right.



- Set "0.0.0.0" for **IP Address**. If an IP address assignment fails for some reason, the request for assignment will continue to be sent to the DHCP server until it is successfully configured.


4. Establishing Network for Long Distance Transfer




- When you do not want to use the IP address assigned by AP-150AH, configure the following settings.

Setting Item	Setting Value
DHCP Client	DISABLE
IP Address	The value that can communicate with NAPT IP Address that you have checked at the step 5 of 4-3-1. Configuring AP-150AH
Subnet Mask	The value set to Subnet Mask that you have checked at the step 5 of 4-3-1. Configuring AP-150AH
Default Gateway	The value set to NAPT IP Address that you have checked at the step 5 of 4-3-1. Configuring AP-150AH
DNS Server (Primary)	Set an appropriate value for your environment.
DNS Server (Secondary)	Set an appropriate value for your environment.

4. Check the settings and click **Submit**.

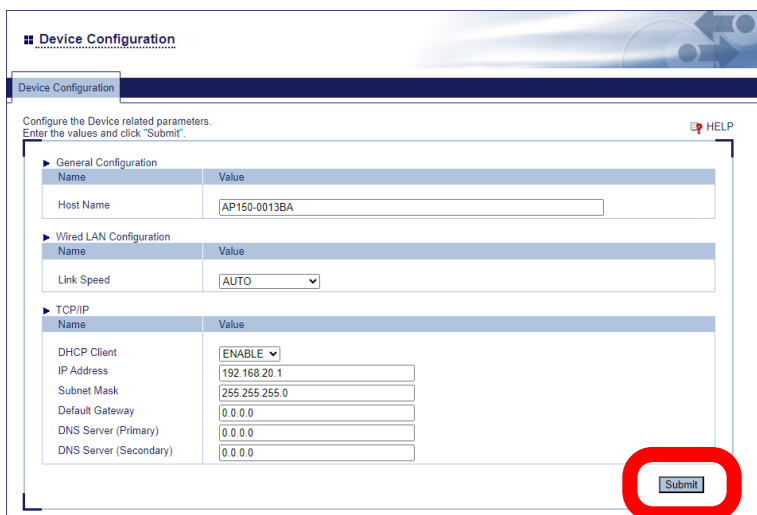

5. The completion page is displayed.
Click **Restart**. The new settings will take effect after EX-150AH is restarted.

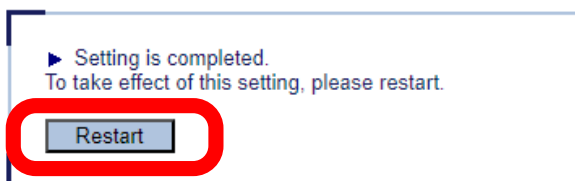

- If you do not want to apply the configuration change, reset it to the previous settings and click **Submit** at the bottom right of the Web page. Remember that the changes will take effect after the restart.

- 6.** The restart progress page is displayed.
When the login page is displayed, the configuration is completed.

4-3-3. Configuring Other Devices

To use the NAPT function, an IP address of AP-150AH needs to be set as the default gateway for EX-150AH and other devices that communicate via AP-150AH.

Device	Default gateway setting
Wireless station devices that wirelessly connect to EX-150AH	The value set to NAPT IP Address that you have checked at the step 5 of 4-3-1. Configuring AP-150AH
Devices that directly connect to AP-150AH or devices connect to AP-150AH via Ethernet HUB on a wired LAN	The value set to IP Address of Device Configuration on AP-150AH. * For how to check the value, see 4-1. Changing Network Settings .

For how to change the settings, see the user's manual of each device.

5. Basic Functions

5-1. Checking Status for Connected Wireless Station Devices

The operating status of the connected IEEE 802.11ah wireless station device can be checked on the Web page. The status includes MAC address of devices and the radio strength.


This chapter describes how to check the operating status of the IEEE 802.11ah wireless station device.

1. Display the AP-150AH's Web page.



- For how to display the AP-150AH Web page, see **3-4. Displaying the AP-150AH's Web Page**.

2. Click **Status - Wireless LAN STA list** from the page menu.

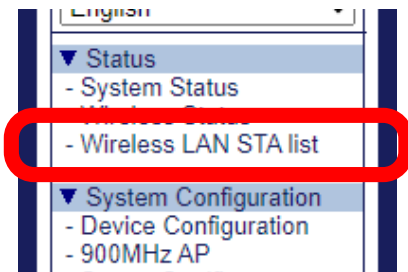

3. The **Wireless LAN STA list** page is displayed.

It shows the status of the IEEE 802.11ah wireless station devices connected to AP-150AH.

No.	MAC Address	Rx Power	IP Address	Host Name
1	1c:bc:ec:11:11:11	-70dbm	10.0.4.6	EX150-11111111



- **IP Address** and **Host Name** are displayed only for devices that have been assigned an IP address using the DHCP server function of AP-150AH. For the host name, up to 19 characters are displayed.

5-2. Using DHCP Client Function


If the DHCP client function is enabled, the necessary communication information can be obtained from the DHCP server. For how to enable it, see **4-1. Changing Network Settings**.

**Note**

- By defaults, **DHCP Client** is set to **ENABLE**.
- When **NAPT** is set to **ENABLE** and the information is obtained from the DHCP server, such information will be used for the wired LAN side of AP-150AH, not for the wireless LAN side.

5-3. MAC Address Filter Setting

By configuring the MAC Address Filter, it is possible to block access from particular IEEE 802.11ah wireless station devices to AP-150AH.

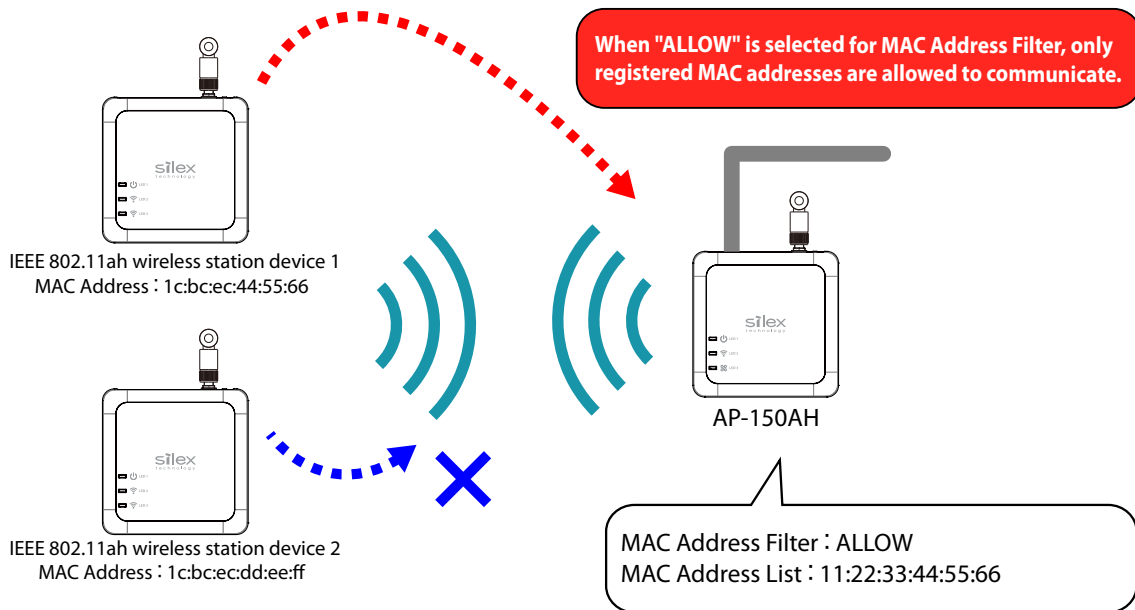

5-3-1. Filter Type

By registering the MAC Address to a list, access of IEEE 802.11ah wireless station devices is allowed or denied based on the filter type below.

Filter Type	Operation
DISABLE	Does not use MAC Address filter. All IEEE 802.11ah wireless station devices are allowed to access.
ALLOW	Allows access only from IEEE 802.11ah wireless station devices with the registered MAC Address.
DENY	Denies access from IEEE 802.11ah wireless station devices with the registered MAC Address.


5-3-2. MAC Address Filter

Register the MAC Address of devices to allow/deny access to AP-150AH.

Up to 30 MAC Addresses can be registered.

To register, create a list of MAC Addresses as a text file and import it to AP-150AH from the Web page.

To change the contents of the MAC Address list, update the MAC Address list file accordingly and import it again.

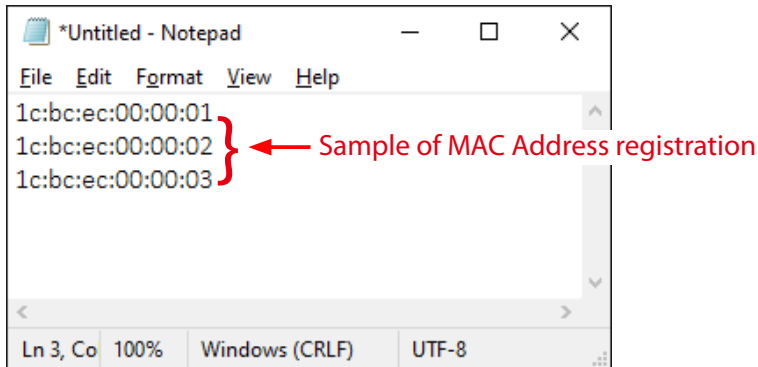**Note**

- Create the MAC Address list as a text file using an editor, etc. and save it with any file name.
- In MAC Address list, one MAC Address needs to be described per line.
- For the line feed code, use CR+LF or LF.

5-3-3. MAC Address Filter Settings


Following explains how to configure the MAC Address filter.

1. Display the AP-150AH's Web page.




- For how to display the AP-150AH Web page, see **3-4. Displaying the AP-150AH's Web Page.**


2. Click **System Configuration - 900MHz AP** from the page menu.

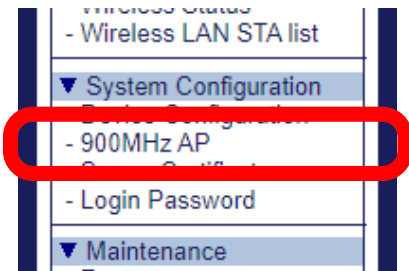

3. The **900MHz AP** page is displayed.
Click **MAC Address Filter** tab to display the MAC address filter page.

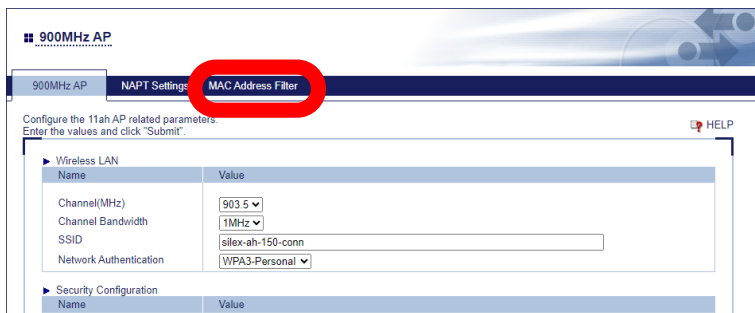

4. Select **MAC Address Filter**.
Click **Choose File** and specify a file containing a list of the MAC Addresses.

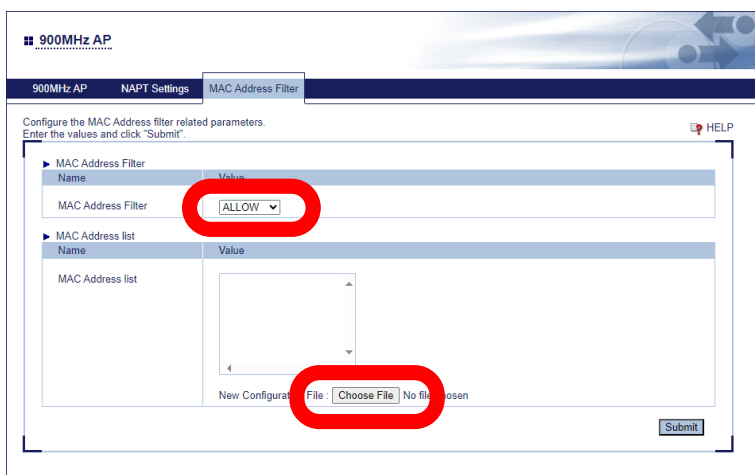

5. Check the configuration file you have selected is displayed at the **New Configuration File** field. Click **Submit**.

900MHz AP

900MHz AP > NAPT Settings > MAC Address Filter

Configure the MAC Address filter related parameters.
Enter the values and click "Submit".

MAC Address Filter

Name	Value
MAC Address Filter	ALLOW

MAC Address list

Name	Value
MAC Address list	

New Configuration File: Choose

6. The completion page is displayed.
Click **Restart**.

Setting is completed.
To take effect of this setting, please restart.

7. The restart progress page is displayed.
When the login page is displayed, the configuration is completed.

5-4. Login Password Setting


The following explains how to change the AP-150AH's login password.

1. Display the AP-150AH's Web page.



- For how to display the AP-150AH Web page, see **3-4. Displaying the AP-150AH's Web Page.**

2. Click **System Configuration - Login Password** from the page menu.

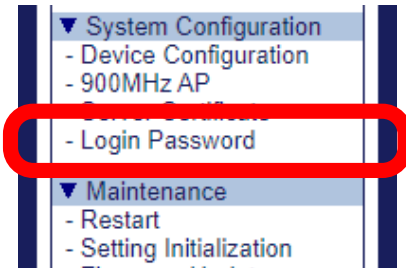


3. The **Password Configuration** page is displayed.
Enter the password to both **New Password** and **Confirm New Password** and click **Submit**.



- TIP**
- If other settings are clicked from the left menu before clicking **Submit**, the entered values will be cleared. Be sure to click **Submit** to save the current values when you move to the other page.
 - Make a note of the password so that you can refer when you have forgotten it. Without the password, no settings can be changed unless AP-150AH is reset to the factory default settings.

- 4.** The completion page is displayed.
Click **Restart**. The new settings will take effect after AP-150AH is restarted.

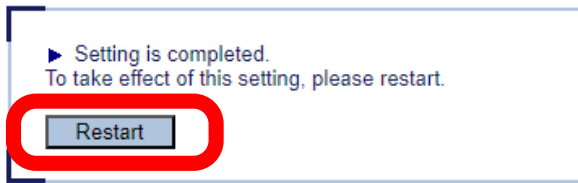**Note**

- If you do not want to apply the configuration change, reset it to the previous settings and click **Submit** at the bottom right of the Web page. Remember that the changes will take effect after the restart.

- 5.** The restart progress page is displayed.
When the login page is displayed, the configuration is completed.

6. Maintenance Functions


6-1. Restarting

This chapter explains how to restart AP-150AH.

6-1-1. Manual Restart at the Unit Side

Restart by Unplugging the Power Supply Cable

1. Remove the power supply cable of AP-150AH and re-insert it again.

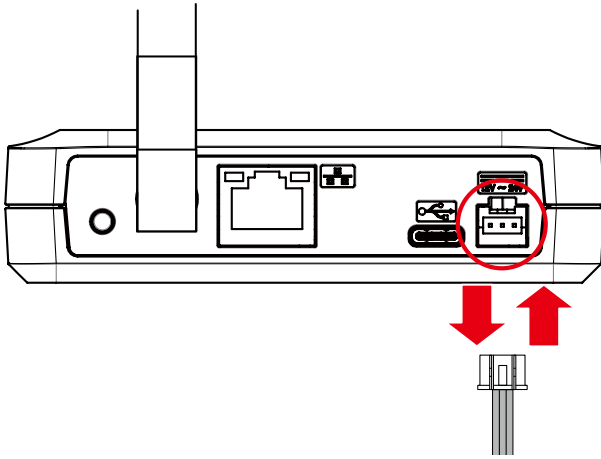


- When the power is supplied from the USB Type-C power connector, unplug the USB Type-C cable and plug it again.

2. When the LED1 turns green, the restart is completed.

Restart by Using the Push Switch

1. Make sure that AP-150AH is turned on, press and hold the push switch (1) and release it in 4 sec (2).

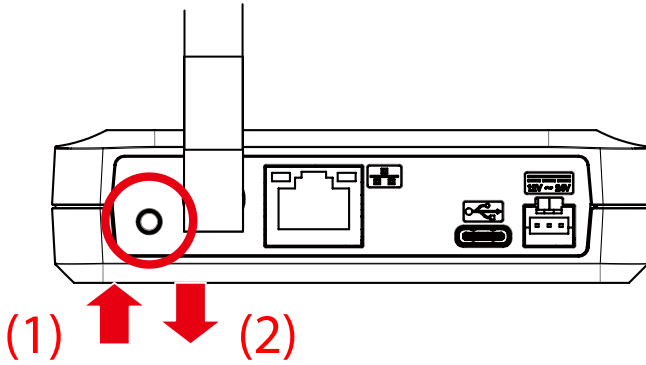

- If the push switch is held down for 5 sec or longer, AP-150AH will be initialized.

2. AP-150AH will restart.

6-1-2. Remote Restart from the Web Page


1. Display the AP-150AH's Web page.




Note

- For how to display the AP-150AH Web page, see **3-4. Displaying the AP-150AH's Web Page.**

2. Click **Maintenance - Restart** from the page menu.

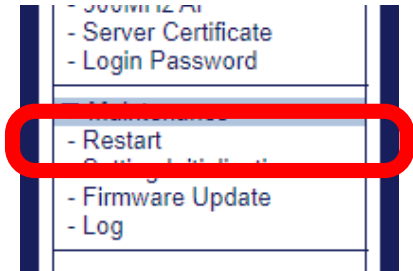

3. When the **Restart** page is displayed, click **Yes**.

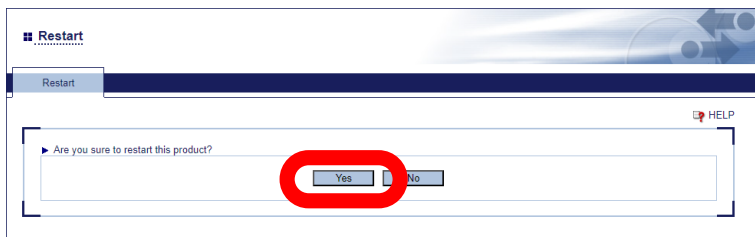

4. The restart progress page is displayed.
When the login page is displayed, the configuration import is completed.

6-2. Updating Firmware

This chapter explains how to update the AP-150AH firmware.



- The firmware update takes a time if it is done over IEEE 802.11ah wireless network.

6-2-1. Downloading the Firmware

The latest firmware file can be downloaded from our website.
See the instructions below to download the firmware file.

1. Access our website below.

URL	
USA	https://www.silextechnology.com/

2. When the website is displayed, click **Support Center** in the bottom of the page.
3. Click **Networking Product Resources**.
4. Select the product model and download the firmware file.

6-2-2. Updating the Firmware


1. Display the AP-150AH's Web page.




Note

- For how to display the AP-150AH Web page, see **3-4. Displaying the AP-150AH's Web Page.**

2. Click **Maintenance - Firmware Update** from the page menu.

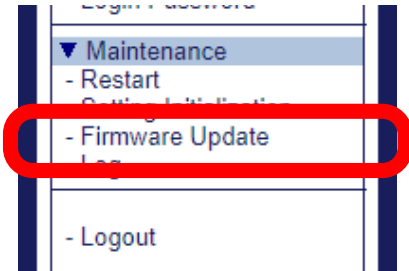

3. The **Firmware Update** page appears.
Click the button to the right of **New firmware**, and select the latest firmware (APEX-150AH.bin) that has been downloaded to the PC.

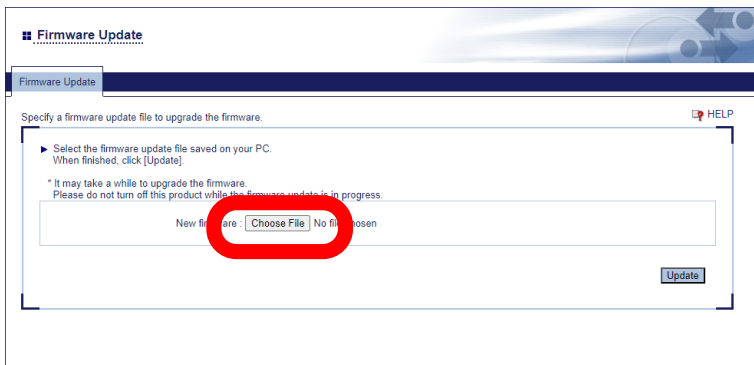

4. Click **Update**.



- 5.** A confirmation dialog is displayed. Click **OK**

- 6.** The firmware update will begin.


- 7.** When the login page is displayed, the firmware update is completed.
Check the version information at the bottom left of the login page.

6-3. Factory Default Configuration


This chapter explains how to reset AP-150AH to the factory default settings.

6-3-1. Initialization Using the Push Switch on AP-150AH

1. Press and hold the push switch of AP-150AH and release it in 5 sec or longer to start the factory default configuration.

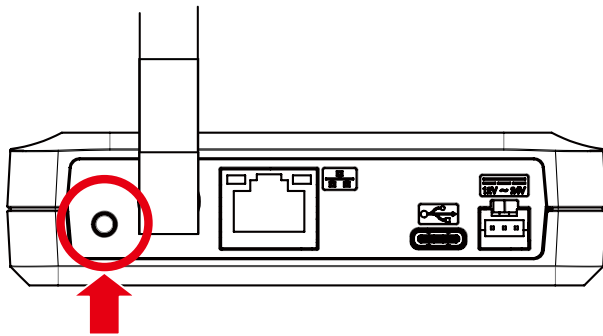

2. When the LED1/LED2/LED3 start blinking green together (1), release the push switch (2).

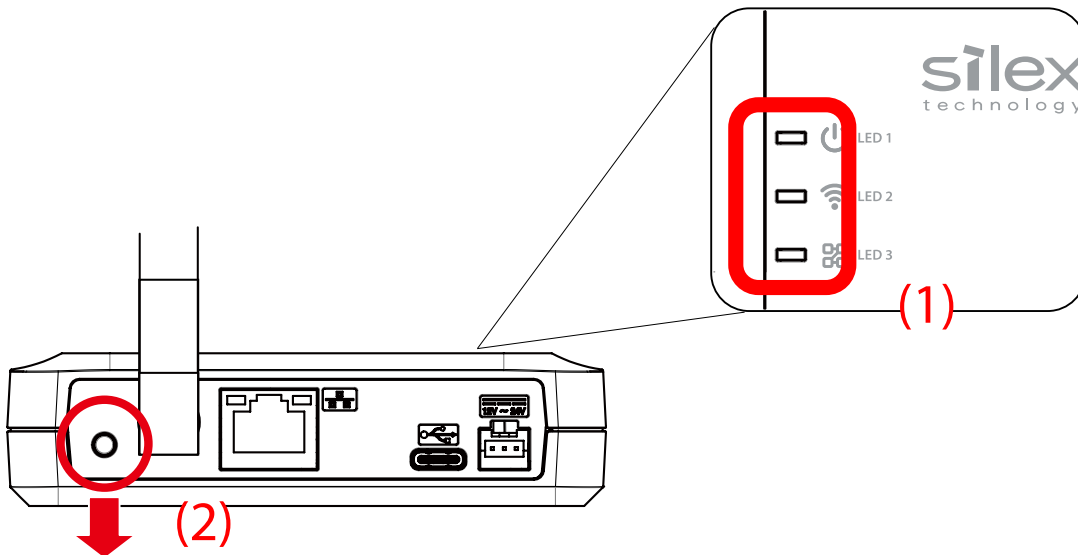

3. The factory default configuration begins.
When the LED1 turns green, the factory default configuration is completed.

6-3-2. Initialization from the Web Page


1. Display the AP-150AH's Web page.




Note

- For how to display the AP-150AH Web page, see **3-4. Displaying the AP-150AH's Web Page.**

2. Click **Maintenance - Setting Initialization** from the page menu.

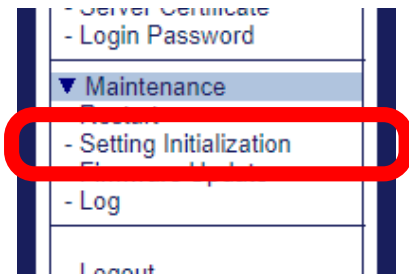

3. The **Setting Initialization** page is displayed.
Click **Yes**.

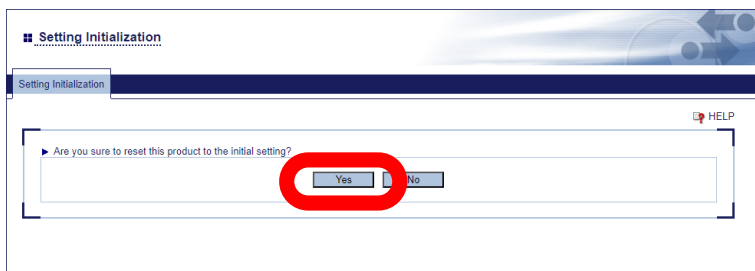

4. A confirmation dialog is displayed.
Click **OK**.

5. The restart progress page is displayed.
When the login password configuration page is displayed, the factory default configuration is complete.

A. List of All Settings

A-1. Device Configuration

General Configuration

Item	Host Name
Details	Set the host name. Be sure to use a unique name that is not used by other devices.
Range	1 to 32 characters
Default Value	AP150-xxxxxx (xxxxxx is the last 6 digits of the MAC address, and letters are uppercase)
Note	The following symbols and spaces cannot be used. `~!@#\$%^&*()=+[]{}¥ ;:'";<>/?

Wired LAN Configuration

Item	Link Speed
Details	Set a link speed for wired LAN.
Range	AUTO 10 BASE-T-Half 10 BASE-T-Full 100 BASE-TX-Half 100 BASE-TX-Full
Default Value	AUTO

TCP/IP

Item	DHCP Client
Details	When this setting is enabled, an IP address is automatically obtained from a DHCP server. To assign an IP address using DHCP, the DHCP server must be running in your subnetwork. * If the DHCP server is not running, values of the following setting items will be applied. - IP Address - SubNet Mask - Default Gateway - DNS Server (Primary) - DNS Server (Secondary)
Range	ENABLE/DISABLE
Default Value	ENABLE

Item	IP Address
Details	Set the IP address. If the DHCP Client is enabled on your network, the IP address obtained from it will be applied.
Range	0.0.0.0 to 255.255.255.254 * IP addresses of "x.x.x.255", "0.x.x.x" (except for 0.0.0.0), and "127.x.x.x" cannot be used. * It is impossible to use IP addresses with the same network address as NAPT IP Address .
Default Value	192.168.20.1

Item	Subnet Mask
Details	Set the subnet mask. If the DHCP Client is enabled on your network, the Subnet Mask obtained from it will be applied. When set to "0.0.0.0", a subnet mask appropriate for the IP address is automatically assigned.
Range	0.0.0.0 to 255.255.255.255
Default Value	255.255.255.0

Item	Default Gateway
Details	Set the gateway address. If the DHCP Client is enabled on your network, the Default Gateway obtained from it will be applied. When set to "0.0.0.0", this setting is disabled.
Range	0.0.0.0 to 255.255.255.255
Default Value	0.0.0.0

Item	DNS Server (Primary)
Details	Set a primary DNS address. When DHCP Client is enabled, the DNS address obtained by DHCP will be applied.
Range	0.0.0.0 to 255.255.255.255
Default Value	0.0.0.0

Item	DNS Server (Secondary)
Details	Set a secondary DNS address. When DHCP Client is enabled, the DNS address obtained by DHCP will be applied.
Range	0.0.0.0 to 255.255.255.255
Default Value	0.0.0.0

A-2. 900MHz AP

A-2-1. 900MHz AP

Wireless LAN

Item	Channel(MHz)
Details	Set the channel to use for the IEEE 802.11ah wireless LAN.
Range	The configurable setting will differ depending on the Channel Bandwidth . When Channel Bandwidth is 1MHz : 903.5 / 904.5 / 905.5 / 906.5 / 907.5 / 908.5 / 909.5 / 910.5 / 911.5 / 912.5 / 913.5 / 914.5 / 915.5 / 916.5 / 917.5 / 918.5 / 919.5 / 920.5 / 921.5 / 922.5 / 923.5 / 924.5 / 925.5 / 926.5 When Channel Bandwidth is 2MHz : 905.0 / 907.0 / 909.0 / 911.0 / 913.0 / 915.0 / 917.0 / 919.0 / 921.0 / 923.0 / 925.0 When Channel Bandwidth is 4MHz : 910.0 / 914.0 / 918.0 / 922.0 When Channel Bandwidth is 8MHz : 908.0 / 916.0
Default Value	903.5

Item	Channel Bandwidth
Details	Set the frequency bandwidth.
Range	1MHz / 2MHz / 4MHz / 8MHz
Default Value	1MHz

Item	SSID
Details	Set the SSID for the IEEE 802.11ah wireless LAN.
Range	1 to 32 characters
Default Value	silex-ah-150-conn

Item	Network Authentication
Details	Set the authentication method to use to connect with IEEE 802.11ah wireless station device.
Range	Open / Enhanced Open / WPA3-Personal
Default Value	WPA3-Personal
Note	Open Allows all access without authentication. Enhanced Open Allows all access without authentication but performing AES-CCMP-128 encryption. WPA3-Personal Performs network authentication using AES-CCMP-128 encryption and SAE.

AP-150AH User's Manual
A. List of All Settings

Security Configuration

Item	Pre-Shared Key
Details	Set the Pre-Shared Key when the Network Authentication is WPA3-Personal .
Range	8 to 63 characters
Default Value	LetMeConnect_SX150AH
Note	This setting must be the same as that of your device you wish to connect to.

Extension Configuration

Item	Beacon Interval(ms)
Details	Set the beacon transmission interval (millisec).
Range	100 to 1000
Default Value	100

Item	DTIM Period
Details	Set the DTIM interval for IEEE 802.11ah wireless LAN.
Range	1 to 50
Default Value	10
Note	When the IEEE 802.11ah device is set to power saving mode, increasing the DTIM interval will reduce power consumption, but will increase the delay in multicast distribution. Shortening the DTIM interval will increase the bandwidth usage of Beacon frames, which may reduce the throughput.

Item	Transfer Rate
Details	Set the transmission rate. When AUTO is selected, the transfer rate is set automatically.
Range	AUTO / MCS0 / MCS1 / MCS2 / MCS3 / MCS4 / MCS5 / MCS6 / MCS7
Default Value	AUTO

Item	Tx Power(%)
Details	Set the transmission strength for IEEE 802.11ah wireless LAN. Lower transmission strength narrows the radio wave range of AP-150AH and reduces interference with other wireless networks.
Range	10 to 100 (Unit: 10)
Default Value	100

Item	Weak RSSI threshold(dBm)
Details	Set the threshold to notify a drop in the RSSI for the wireless station device connected in an IEEE 802.11ah network. If the RSSI of the wireless station device falls below the specified value, it will be notified by an LED.
Range	-35 to -95
Default Value	-75

A-2-2. NAPT Settings

NAPT Settings

Item	NAPT
Details	Enable/Disable the NAPT function.
Range	ENABLE/DISABLE
Default Value	ENABLE

Item	NAPT IP Address
Details	This setting is displayed when NAPT is ENABLE . Set the IP address to use for the wireless LAN side when the NAPT function is enabled. * IP addresses of "x.x.x.255", "0.x.x.x" (except for 0.0.0.0), and "127.x.x.x" cannot be used. * It is impossible to use IP addresses with the same network address as IP Address .
Range	0.0.0.0 to 255.255.255.254
Default Value	10.0.0.1

Item	Subnet Mask
Details	This setting is displayed when NAPT is ENABLE . Set the subnet mask to use for the wireless LAN side when the NAPT function is enabled.
Range	0.0.0.0 to 255.255.255.255
Default Value	255.255.240.0

Item	DHCP Start IP Address
Details	This setting is displayed when NAPT is ENABLE . Set the start IP address used for DHCP Server function to assign the address.
Range	0.0.0.0 to 255.255.255.254
Default Value	10.0.0.10

Item	DHCP End IP Address
Details	This setting is displayed when NAPT is ENABLE . Set the end IP address used for DHCP Server function to assign the address.
Range	0.0.0.0 to 255.255.255.254
Default Value	10.0.7.217

Item	DHCP Lease Time
Details	This setting is displayed when NAPT is ENABLE . Set the lease time,
Range	Day : 0 to 99 Hour : 0 to 23 Minute : 0 to 59 * If this is set to 0 days + 0 hours + 0 mins, the lease period will be 10 days.
Default Value	10 Day 0 Hour 0 Minute

Port Forward Configuration

Item	Port Forwarding
Details	Enable/Disable the Port Forwarding function.
Range	ENABLE/DISABLE
Default Value	DISABLE

Add Configuration

Item	Destination (IP Address : Port)
Details	Set the IP address and port number of the destination device for port forwarding function.
Range	IP Address : 0.0.0.1 to 255.255.255.255 Port : 1 to 65535
Default Value	-

Item	Receive Port
Details	Set the number of port for receiving the transferred data.
Range	1 to 65535
Default Value	-

Item	Protocol
Details	Set the protocol for receiving the transferred data.
Range	TCP / UDP
Default Value	-

A-2-3. MAC Address Filter

MAC Address Filter

Item	MAC Address Filter
Details	Configure the access control setting for all MAC addresses. DISABLE : MAC address filter function is disabled. ALLOW : Allows access only from the devices registered to MAC address filter list. DENY : Denies access from the devices registered to MAC address filter list.
Range	DISABLE / ALLOW / DENY
Default Value	DISABLE

Item	MAC Address list
Details	This is a list of MAC addresses registered in the MAC address filter.
Range	-
Default Value	None

A-3. Server Certificate

Server Certificate Create

Item	Common Name
Details	Set a name of AP-150AH.
Range	1 to 64 characters
Default Value	AP150-xxxxxx (xxxxxx is the last 6 digits of the MAC address, and letters are uppercase)

Item	Organizational Unit Name
Details	Enter the organization unit name.
Range	Up to 64 characters
Default Value	(None)

Item	Organization Name
Details	Enter the organization name.
Range	Up to 64 characters
Default Value	(None)

Item	Locality Name
Details	Enter the locality/city name.
Range	Up to 128 characters
Default Value	(None)

Item	State or Province Name
Details	Enter the state/province name.
Range	Up to 128 characters
Default Value	(None)

Item	Country/Region code
Details	Enter the code (two characters) representing your country or region.
Range	Up to 2 characters
Default Value	US

A-4. Login Password

Please input the password.

Item	New Password
Details	Set the login password for AP-150AH. The password is used for authentication when the user tries to update settings from a Web browser or to use AMC Manager [®] .
Range	1 to 32 characters
Default Value	(None)

B. Troubleshooting

This chapter provides the solutions for possible troubles you may experience when you are configuring or using the AP-150AH.

B-1. Problems During the Setup

I don't know the IP Address of AP-150AH.

Solution	Use "AMC Manager®". AMC Manager® can search for AP-150AH units connected to a network. For details, see 3-5. Configuration Using AMC Manager® .
----------	--

An error occurs when accessing the Web page of AP-150AH.

If an error occurs when accessing the Web page, you need to check your PC and Web browser settings.

AP-150AH may not be in the same network segment (environment without a router) as your PC.	
Solution	During the initial configuration, place AP-150AH and PC in the same network segment.

If AP-150AH has been used in another network, it may have the settings not allowing the communication with your PC.	
Solution	Please reset AP-150AH to the factory default setting. See 6-3. Factory Default Configuration for details on how to reset AP-150AH to the factory default settings.

If your Web browser is configured to use a proxy server, access to the local network might be blocked.	
Solution	Disable use of the proxy server temporarily or enable access to the local network on your Web browser.

How should I determine the way to assign an IP address to AP-150AH?

There are two ways to assign an IP address to AP-150AH; one is to Get IP address automatically from DHCP server and the other is to Assign IP address manually. Choose the way to assign an IP address according to your environment.

When there is a DHCP server in the network environment:

Solution	<p>You can use Get IP address automatically from DHCP server. As AP-150AH is set by default to Get IP address automatically, AP-150AH will obtain an IP address appropriate to your network environment from the DHCP server just by powering up AP-150AH.</p> <p>See 6-3. Factory Default Configuration for details on how to reset AP-150AH to the factory default settings.</p>
----------	---

When there is no DHCP server in the network environment:

When you do not prefer getting an IP address from DHCP server:

Solution	<p>Please use Assign IP address manually. Keep in mind of the following points regarding the IP address to assign to AP-150AH.</p> <ul style="list-style-type: none"> - Assign an IP address unique in the network. - Assign an IP address that has the same address class as the PC that will use AP-150AH. e.g. When an IP address of the PC is "192.168.0.xx", assign an address such as "192.168.0.100" that is not used by other network devices. <p>(Tips about the IP address)</p> <ul style="list-style-type: none"> - An IP address is a unique number for identifying network devices. An IP address is indicated with four numbers divided by a period (.), for example "192.168.0.1". The integer from 0-255 is used for each number. - An IP address is, depending on the number assigned, categorized to 3 classes below. - Numbers making up the IP address are either network numbers indicating network, or host numbers indicating each network device; each number indicates the different meaning based on the IP address class. Each class is categorized as the following diagram which is indicating a network number as n, and a host number as u. - An IP address with the same network number must be assigned to the network devices in the same network segment. - There is an address range in the IP address called the private address that could be used freely. In the LAN environment not directly connected to the internet, an IP address is assigned within the range of the private address. <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>First 1 digits in IP address</th> <th>Class</th> <th>Definition of IP address n: network number u: host number</th> <th>Size of the network to be used</th> <th>Private address</th> </tr> </thead> <tbody> <tr> <td>0 - 127</td> <td>A</td> <td>n.u.u.u</td> <td>Large network</td> <td>10.0.0.0 - 10.255.255.255</td> </tr> <tr> <td>128 - 191</td> <td>B</td> <td>n.n.u.u</td> <td>Mid-size network</td> <td>172.16.0.0 - 172.31.255.255</td> </tr> <tr> <td>192 - 223</td> <td>C</td> <td>n.n.n.u</td> <td>Small network</td> <td>192.168.0.0 - 192.168.255.255</td> </tr> </tbody> </table>	First 1 digits in IP address	Class	Definition of IP address n: network number u: host number	Size of the network to be used	Private address	0 - 127	A	n.u.u.u	Large network	10.0.0.0 - 10.255.255.255	128 - 191	B	n.n.u.u	Mid-size network	172.16.0.0 - 172.31.255.255	192 - 223	C	n.n.n.u	Small network	192.168.0.0 - 192.168.255.255
First 1 digits in IP address	Class	Definition of IP address n: network number u: host number	Size of the network to be used	Private address																	
0 - 127	A	n.u.u.u	Large network	10.0.0.0 - 10.255.255.255																	
128 - 191	B	n.n.u.u	Mid-size network	172.16.0.0 - 172.31.255.255																	
192 - 223	C	n.n.n.u	Small network	192.168.0.0 - 192.168.255.255																	

B-2. Problems on Wireless Access Point Function

I cannot connect to AP-150AH wirelessly.

Please check the operation status and configuration of AP-150AH.

The wireless LAN setting may differ between AP-150AH and the connected IEEE 802.11ah compliant device.	
Solution	Connect a LAN cable to AP-150AH and check the wireless LAN settings.

The IEEE 802.11ah compliant device may be connected to a different Access Point that has the same SSID.	
Solution	Set a different SSID between AP-150AH and the Access Point that the IEEE 802.11ah compliant devices is unintentionally connected. Or, set the transmission strength lower for that Access Point to shorten the wireless coverage. * It is possible to see if the IEEE 802.11ah compliant device is properly connected by accessing the Web page of AP-150AH. For details, see 5-1. Checking Status for Connected Wireless Station Devices.

Connection is interrupted and disconnected.

AP-150AH may be installed at a location subject to weaker radio wave signals.	
Solution	Please reconsider the location of installation and condition of use.

I cannot access the device that is connected to AP-150AH via wired LAN.

The device may be connected to a network different from the private network that is established using the NAPT function of AP-150AH.

Solution	<ul style="list-style-type: none">- When using a private IP network using the NAPT function of AP-150AH When your device is accessing from outside the private IP network, connect it wirelessly to AP-150AH to join the private IP network. If it does not support IEEE 802.11ah, consider using the IEEE 802.11ah compliant bridge product, BR-100AH or Wi-Fi Extender EX-150AH.- When there is no need to use a private IP network using the NAPT function of AP-150AH Disable the NAPT function, and assign a static IP address or a dynamic IP address of the DHCP server for the device on a wired LAN of AP-150AH.
----------	--

IP address of AP-150AH may not be set properly as the default gateway of each device.

Solution	<p>When the NAPT function is enabled, a different IP address needs to be set as the default gateway for each device.</p> <ul style="list-style-type: none">- IEEE 802.11ah compliant devices connected to AP-150AH, or devices connected to them Set the value of NAPT IP Address of AP-150AH.- Devices directly connected to AP-150AH, or devices connected to AP-150AH via an Ethernet HUB Set the value of IP Address of AP-150AH.
----------	--

The port forwarding function may not be working properly.

Solution	Confirm that the Destination (IP Address: Port) , Receive Port , and Protocol settings are configured correctly on AP-150AH.
----------	---

C. Product Information and Customer Services

C-1. Product Information

The services below are available from the Silex Technology website. For details, please visit the Silex Technology website.

URL	
USA	https://www.silextechnology.com/

- Latest firmware download
- Latest software download
- Latest manual download
- Support information (FAQ)

C-2. Customer Support Center

Customer Support is available for any problems that you may encounter.

If you cannot find the relevant problem in this manual or on our website, or if the corrective procedure does not resolve the problem, please contact Silex Technology Customer Support.

Contact Information	
USA	support@silexamerica.com



Note

- Visit the Silex Technology website for the latest FAQ and product information.